

Manuals

Disable Alarms on DVR-H9124V/8V and SFN6

If your DVR is beeping non stop, follow this guide in order to disable all of the alarms.

Step 1: Right click on the mouse and select 'Main Menu'



Step 2: Select Advanced

Manuals



Step 3: Select Alarm

Manuals



Step 4: Change 'Alarm Manage Output' to 05 and also change 'Buzzer' to 05

Manuals

I/O CHANNEL CH1 CH2 CH3 CH4

I/O ALARM NO NO NO NO

HDD LOSS OFF HDD SPACE OFF

VIDEO LOSS OFF

ALARM MANAGE OUTPUT OS BUZZER OS

Post Alarm Recording 1MIN


EMAIL SETUP

Alarm duration time setup

NEXT PAGE DEFAULT APPLY EXIT


Step 5: Hit 'Apply' at the bottom of the page

Manuals

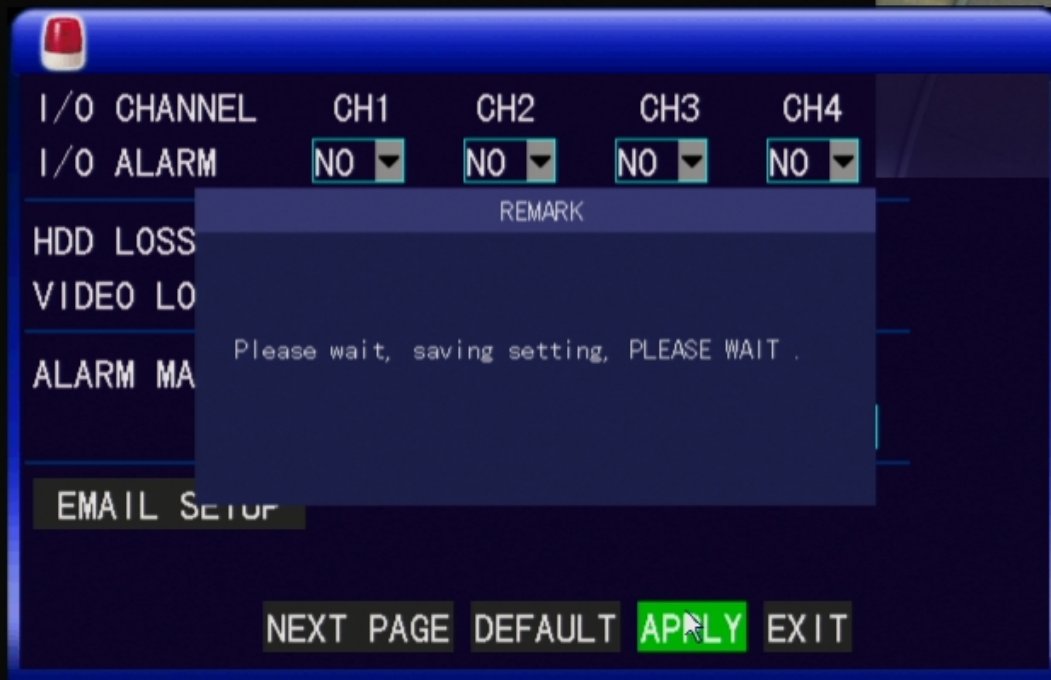

Step 6: Hit 'Ok' when the system says 'Save Successfully'

Manuals

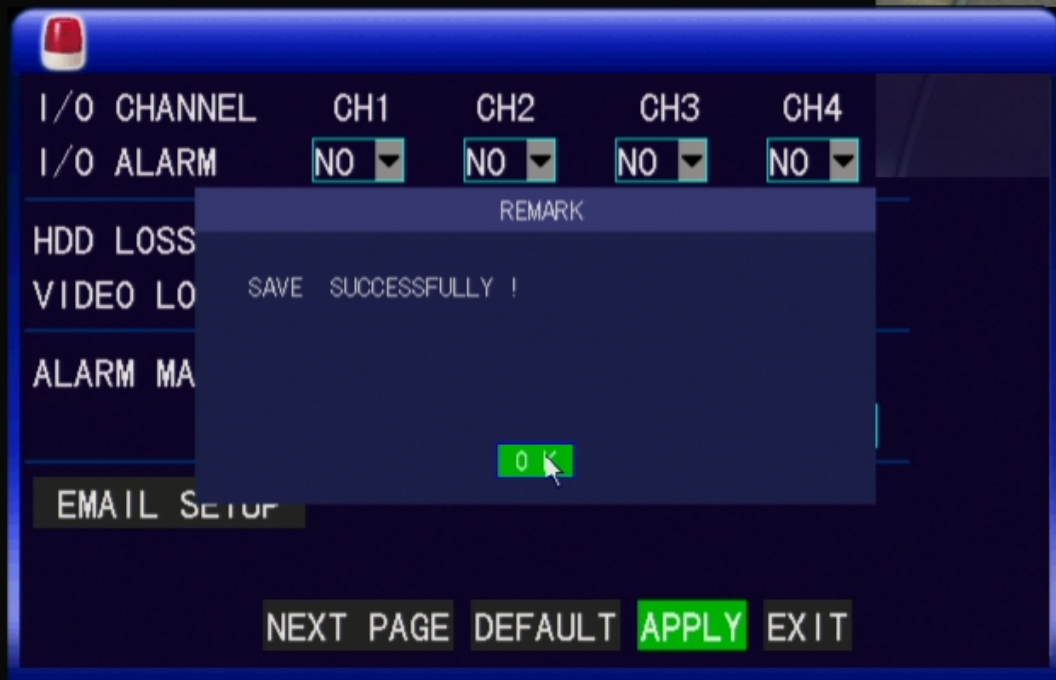

The alarms on the DVR should have stopped beeping now.

Unique solution ID: #1113
Author: Alex Crewell
Last update: 2013-08-17 00:16