

Manuals

Creating a Free Zmodo DNS Account for Use with Zmodo DVRs

Zmodo is proud to introduce our new dynamic DNS service, which will allow our customers to automatically update their public IP addresses with our server and connect remotely to their devices through a friendly, easy to use interface. Getting everything set up is straightforward and should only take a few minutes.

Step 1. Download the Windows Client from zmododns.com

The screenshot shows the Zmodo DDNS website interface. At the top, there is a blue header with the Zmodo logo and the text "DDNS". To the right of the logo are three links: "Sign In", "Sign Out", and "New User?". Below the header is a light blue banner that says "Welcome to Zmodo Dynamic DNS".

On the left side, there is a text block that reads: "To use our DDNS system all you need to do is create an account here, enter your login information into your ZMODE NVR with an internet connection and check the web site for a link straight to your NVR!". Below this text is a section titled "NEW FEATURE!" in blue. It describes a new standalone application for Windows that allows users to update their external IP address automatically from their Windows PC. It instructs users to un-zip the folder, click on "Zmododns.exe", and login to their Zmodo DNS account from there. At the bottom of this section is a red button with the text "DOWNLOAD Application".


On the right side, there is a diagram illustrating the process. It shows a central box with the text "Zmodo DNS server updates your domain name automatically" and "xxxx.zmododns.com". Two arrows point from this box to two separate steps. The left step is "Login to your Zmodo DNS account on your NVR or through a Windows PC" and is accompanied by an icon of a Zmodo NVR. The right step is "Check your NVR from any Internet Explorer Browser" and is accompanied by an icon of a computer monitor.

At the bottom of the right side, there is a blue banner that says "Purchase Zmodo products here!" followed by a large logo for "CCTVHotDeals".

Manuals

Extract the download using 7Zip.

Open the extracted folder, then open the program called Zmododns.

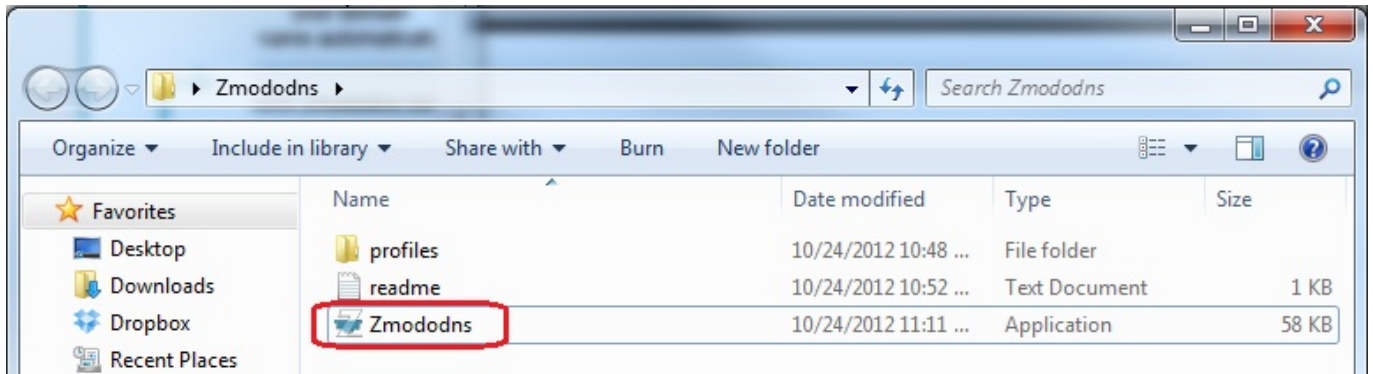

Step 2. Sign up for an account at zmododns.com



[Sign In](#) [Sign Out](#) [New User?](#)

Welcome to Zmodo Dynamic DNS

To use our DDNS system all you need to do is create an account here, enter your login information into your ZMOD0 NVR with an internet connection and check the web site for a link straight to your NVR!

NEW FEATURE!

Download the new ZMODODNS standalone application for Windows! You can now update your external IP address automatically from your Windows PC! Un-zip the folder anywhere and click on "Zmododns.exe". Login to your Zmodo DNS account from there.

DOWNLOAD Application

Zmodo DNS server updates your domain name automatically

xxxx.zmododns.com

Login to your Zmodo DNS account on your NVR or through a Windows PC

Check your NVR from any Internet Explorer Browser

Purchase Zmodo products here!




Choose your desired username and password at our site. You will be informed if an existing user already exists, or if your email is already registered (limit 1 account per email).

Manuals



[Sign In](#) [Sign Out](#) [New User?](#)

Create an Account

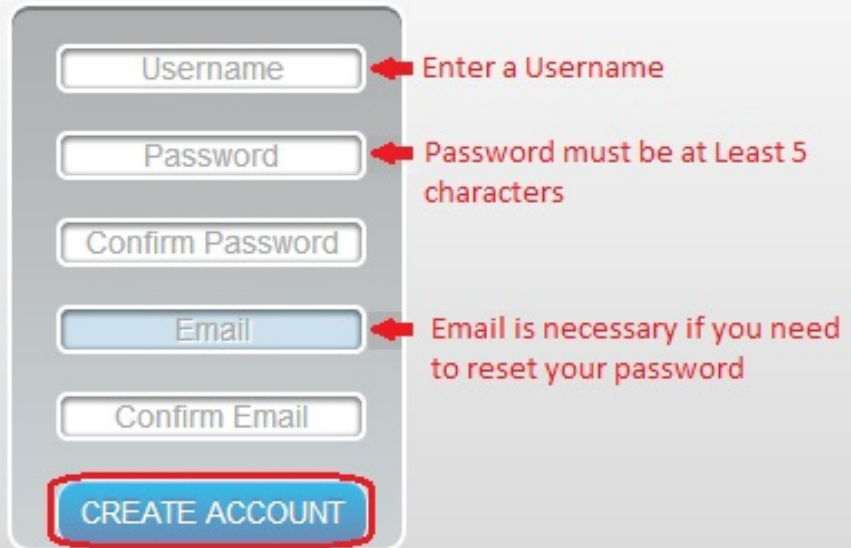

The form contains the following fields and annotations:

- Username**: An annotation with a red arrow pointing to the field says "Enter a Username".
- Password**: An annotation with a red arrow pointing to the field says "Password must be at Least 5 characters".
- Confirm Password**: No annotation.
- Email**: An annotation with a red arrow pointing to the field says "Email is necessary if you need to reset your password".
- Confirm Email**: No annotation.
- CREATE ACCOUNT**: The button is highlighted with a red rectangular border.


Step 3. Create domain name(s) for use with your device(s)

Manuals



Once signed in, you will need to add a domain. This will be the address used to access your device. Each account can request up to 5 domains for use with multiple devices at different IP addresses. Click on "Add Domain"

Manuals



Sign InSign OutNew User?

Hi, Demo

These are your registered domain names with their current IP.(Max 5)

Unassigned D	Unassigned D	Unassigned D	Unassigned D	Unassigned D

ADD DOMAIN

DELETE DOMAIN

New Zmodo DNS Functionality!

You may now type in your Zmododns name into any browser from any PC and access your Zmodo product!

newuser.zmododns.com

Enter the desired domain name into the blank and hit submit. If the name is available, the user will be informed of a successful domain creation. Otherwise, the user will need to choose a different name.

Add Domain

Enter your desired domain address.

Enter your desired domain name here

[ADD DOMAIN](#)

[RETURN HOME](#)

If available, your domain will show up in this layout: `mydvr.zmododns.com`


Step 4. Login to your account on the Zmododns Windows Client that you downloaded.

Manuals



The image shows a web browser window titled "Zmodo DNS". The background is blue with the "Zmodo" logo at the top. Below the logo, there is a login form. The "Username" field contains the text "demo". To the right of the username field is a checkbox labeled "save user". Below the username field is the "Password" field, which is filled with asterisks. Under the password field are two links: "Forgot password?" and "Need an account?". At the bottom of the form is a "Login" button.

Once logged in, check the "auto update" check-box to enable the software to automatically update your IP address every two hours.

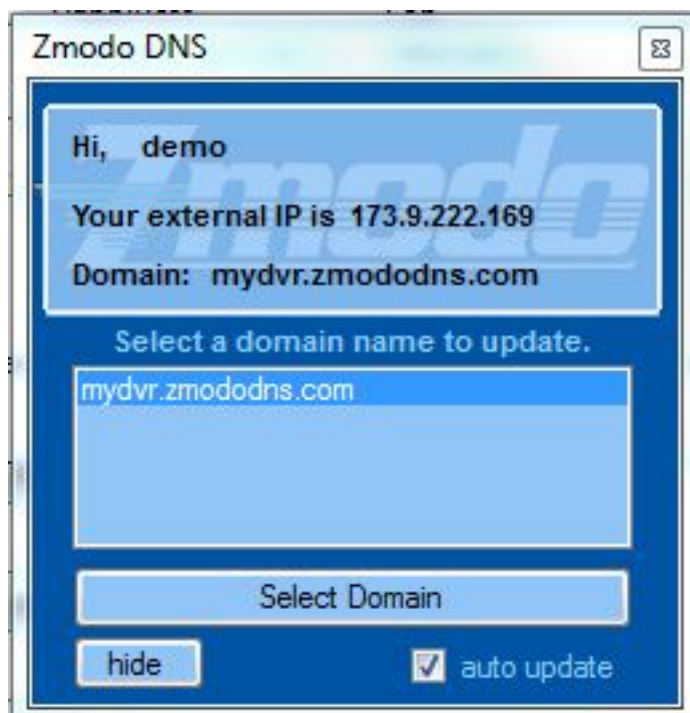

The image shows a web browser window titled "Zmodo DNS" after a successful login. The background is blue with the "Zmodo" logo. A light blue box at the top contains the text: "Hi, demo", "Your external IP is 173.9.222.169", and "Domain: mydvr.zmododns.com". Below this box, the text "Select a domain name to update." is displayed. Underneath is a text input field containing "mydvr.zmododns.com". Below the input field is a "Select Domain" button. At the bottom left is a "hide" button, and at the bottom right is a checked checkbox labeled "auto update".

Manuals

The Zmododns Windows Client software must be running at all times on a PC that is connected to the same router that your DVR is connected to. There is a "Hide" function on the software if you'd prefer to minimize the software to your bottom right Notification Area.

Unique solution ID: #1080

Author: Alex Crewell

Last update: 2013-08-16 18:45