## **Pivot**

## **Apple AirPort Port Mapping Access**

To reach the AirPort port mapping section on the router, you must use 'Airport Utility' software on either the MAC computer or the Windows Computer. You MUST also confirm that the AirPort router is on the "Share a public IP address" under the "INTERNET TAB."

If you are on any other settings such as "Distribute a range of IP addresses" or "Bridge" mode you will not be able to setup port forwarding within the router. The image below show the correct setting to use on the airport utility router.

## Pivot

| AirPort Utility - Base Station 0545db |   |
|---------------------------------------|---|
| File Base Station Settings Help       |   |
|                                       | Internet Inter |
|                                       | Internet Connection TCP/IP DHCP NAT   |
| Base Station 0545db                   | Connect Using: Ethernet   |
|                                       | Ethernet WAN Port: Automatic (Default)  |
|                                       | Select if you want this Apple Wi-Fi base station to share a single IP address with wireless clients using DHCP and NAT, distribute a range of static IP addresses using only DHCP, or act as a bridge.     Connection Sharing:   Share a public IP address     Share a public IP address   Share a public IP addresses     Distribute a range of IP addresses   Off (Bridge Mode)     Help   Profile:   Default Settings     Profile:   Default Settings   Revert   Update  |

Unique solution ID: #1310 Author: Dan O Last update: 2014-04-11 10:13