DVR Systems Apple AirPort Port Mapping Access

To reach the AirPort port mapping section on the router, you must use 'Airport Utility' software on either the MAC computer or the Windows Computer. You MUST also confirm that the AirPort router is on the "Share a public IP address" under the "INTERNET TAB."

If you are on any other settings such as "Distribute a range of IP addresses" or "Bridge" mode you will not be able to setup port forwarding within the router. The image below show the correct setting to use on the airport utility router.

DVR Systems

AirPort Utility - Base Station 0545db	
File Base Station Settings Help	
	Internet Inter
	Internet Connection TCP/IP DHCP NAT
Base Station 0545db	Connect Using: Ethernet
Base Station 054500	Ethernet WAN Port: Automatic (Default)
	Select if you want this Apple Wi-Fi base station to share a single IP address with wireless clients using DHCP and NAT, distribute a range of static IP addresses using only DHCP, or act as a bridge. Connection Sharing: Share a public IP address Share a public IP address Share a public IP addresses Distribute a range of IP addresses Off (Bridge Mode) Help Profile: Default Settings Revert Update

Unique solution ID: #1310 Author: Dan O Last update: 2014-04-11 10:13