

ZMD-DC-SBN6

Default Admin Passwords for Zmodo DVR Units

The following is a comprehensive list of all **default** DVR passwords for current and previous Zmodo DVR models:



SBN Series (H9104V, H9108V, ZMD-DD-SBN4, ZMD-DD-SBN8, ZMD-DD-SBN6)

SAN Series (H9114V, H9118V, ZMD-DD-SAN4, ZMD-DD-SAN8)

Login: Admin

Password: 111111 **OR** 888888

[Click Here](#) for more articles relating to this DVR.

ZMD-DC-SBN6



LOGIN

USER

PASSWORD

PLEASE INPUT PASSWORD.

CONFIRM **CANCEL**

 
H8100 Series (H8104UV, H8108UV, H8106UV)

H8110 Series (H8114UV, H8118UV, H8116UV)

Login: admin

Password: 666666

[Click Here](#) for more articles relating to this DVR.

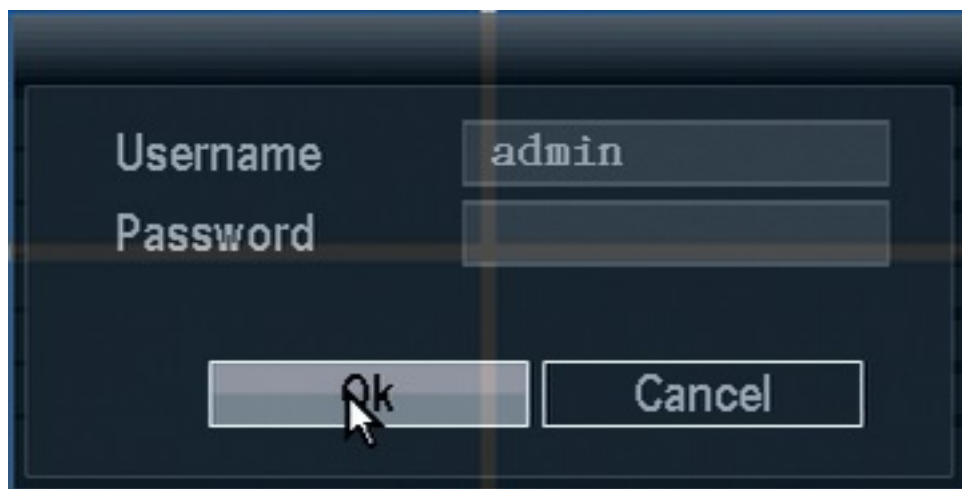

Username

Password

Ok **Cancel**

 
ZMD-DT-SFN6

ZMD-DC-SBN6

Login: admin

Password: (Blank) or 111111

[Click Here](#) for more articles relating to this DVR.

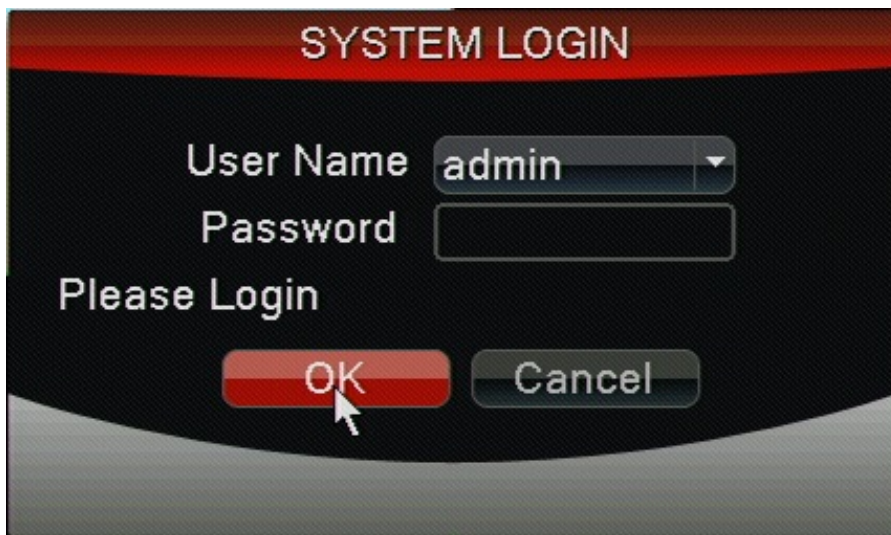

SCN Series(ZMD-DT-SCN4, ZMD-DT-SCN8)

 
SEN Series(ZMD-DH-SEN6)

Login: admin

Password: (Blank) or 111111

[Click Here](#) for more articles relating to this DVR.

ZMD-DC-SBN6

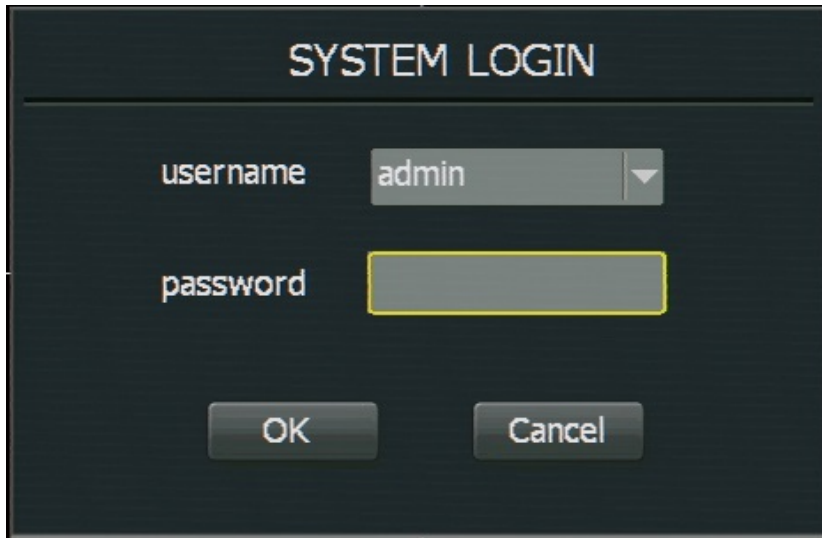A dark-themed dialog box titled "SYSTEM LOGIN". It contains two input fields: "username" with a dropdown menu showing "admin" and a small downward arrow, and "password" with an empty text box. Below the fields are two buttons: "OK" and "Cancel".

SYSTEM LOGIN

username admin ▼

password

OK Cancel

NVR Series: Basic NVR(ZMD-NV-SBN4), Mini-NVR(ZH-NA04-W), and POE-NVR(ZP-NC14-P)

Login: admin

Password: 111111

[Click Here](#) for more articles relating to the Basic NVR.

[Click Here](#) for more articles relating to the Mini-NVR.

[Click here](#) for more articles relating to the POE-NVR.

If your DVR is not listed in this article, then your DVR does not prompt you for a password or have one by default. You will need to look up your DVR and follow the password reset guidelines if you do not know it.

Unique solution ID: #1011

Author: Patricia Pyle

Last update: 2014-04-08 08:39