

DVR-H9124V

Disable Alarms on DVR-H9124V/8V and SFN6

If your DVR is beeping non stop, follow this guide in order to disable all of the alarms.

Step 1: Right click on the mouse and select 'Main Menu'



Step 2: Select Advanced

DVR-H9124V




Step 3: Select Alarm

DVR-H9124V



Step 4: Change 'Alarm Manage Output' to 0S and also change 'Buzzer' to 0S

DVR-H9124V

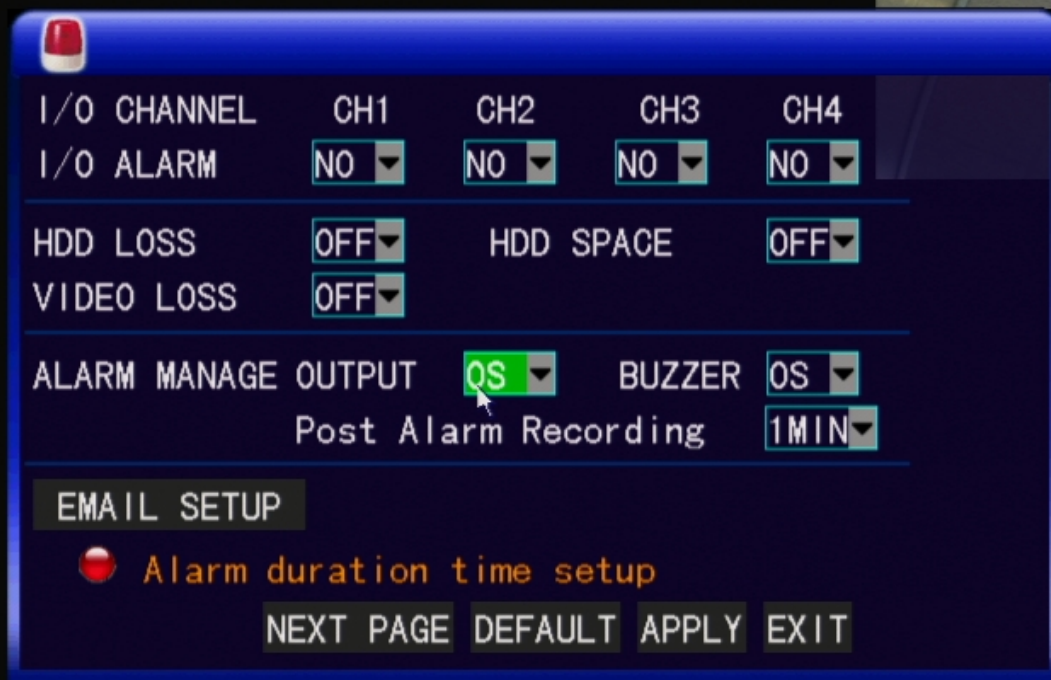

The screenshot shows a web-based configuration interface for a DVR-H9124V. The interface has a blue header bar with a red alarm icon. Below the header, there are several sections for configuring alarm settings. The first section is for I/O CHANNEL and I/O ALARM, with dropdown menus for CH1, CH2, CH3, and CH4, all set to 'NO'. The second section is for HDD LOSS and VIDEO LOSS, both set to 'OFF'. The third section is for HDD SPACE, set to 'OFF'. The fourth section is for ALARM MANAGE OUTPUT, set to 'OS', and BUZZER, set to 'OS'. Below these, there is a 'Post Alarm Recording' dropdown set to '1MIN'. The fifth section is 'EMAIL SETUP', which is currently expanded to show 'Alarm duration time setup'. At the bottom of the interface, there are four buttons: 'NEXT PAGE', 'DEFAULT', 'APPLY', and 'EXIT'.

I/O CHANNEL	CH1	CH2	CH3	CH4
I/O ALARM	NO	NO	NO	NO

HDD LOSS	OFF	HDD SPACE	OFF
VIDEO LOSS	OFF		

ALARM MANAGE OUTPUT	OS	BUZZER	OS
Post Alarm Recording			1MIN


EMAIL SETUP

 Alarm duration time setup

NEXT PAGE DEFAULT APPLY EXIT


Step 5: Hit 'Apply' at the bottom of the page

DVR-H9124V

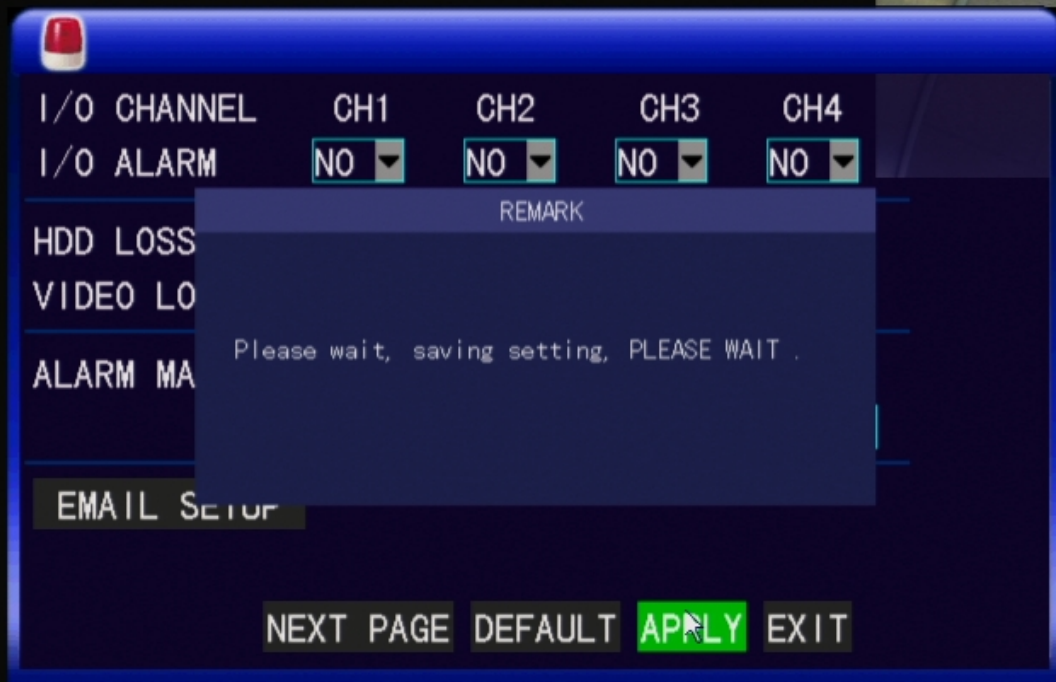

Step 6: Hit 'Ok' when the system says 'Save Successfully'

DVR-H9124V

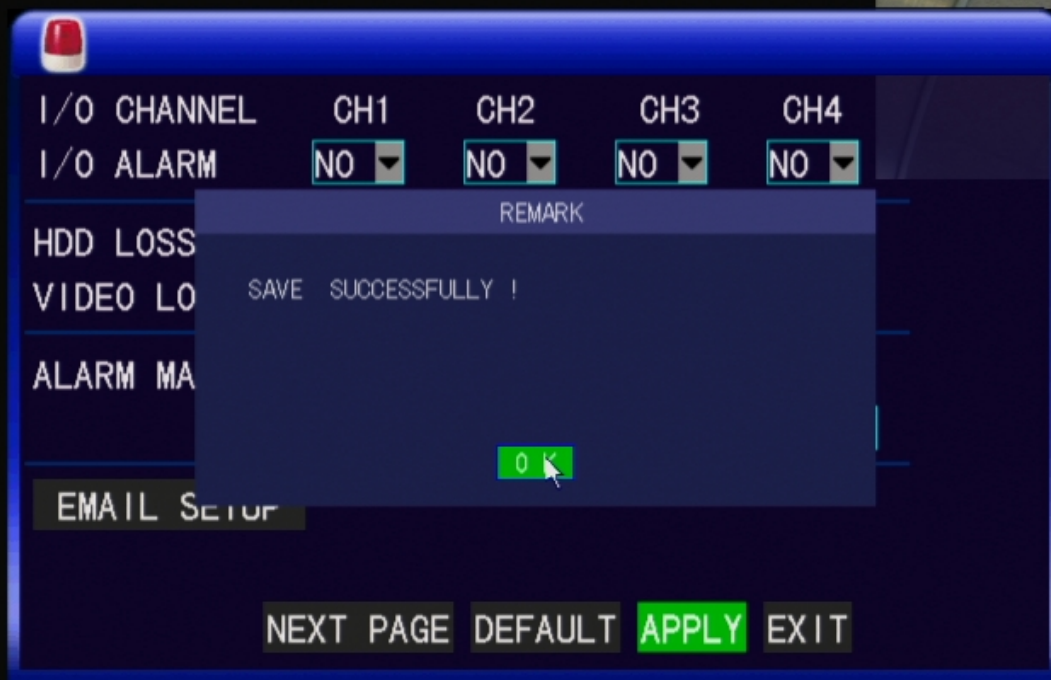

The alarms on the DVR should have stopped beeping now.

Unique solution ID: #1113
Author: Alex Crewell
Last update: 2013-08-17 00:16