


DVR Systems

Disable Alarms on DVR-H9124V/8V and SFN6

If your DVR is beeping non stop, follow this guide in order to disable all of the alarms.

Step 1: Right click on the mouse and select 'Main Menu'

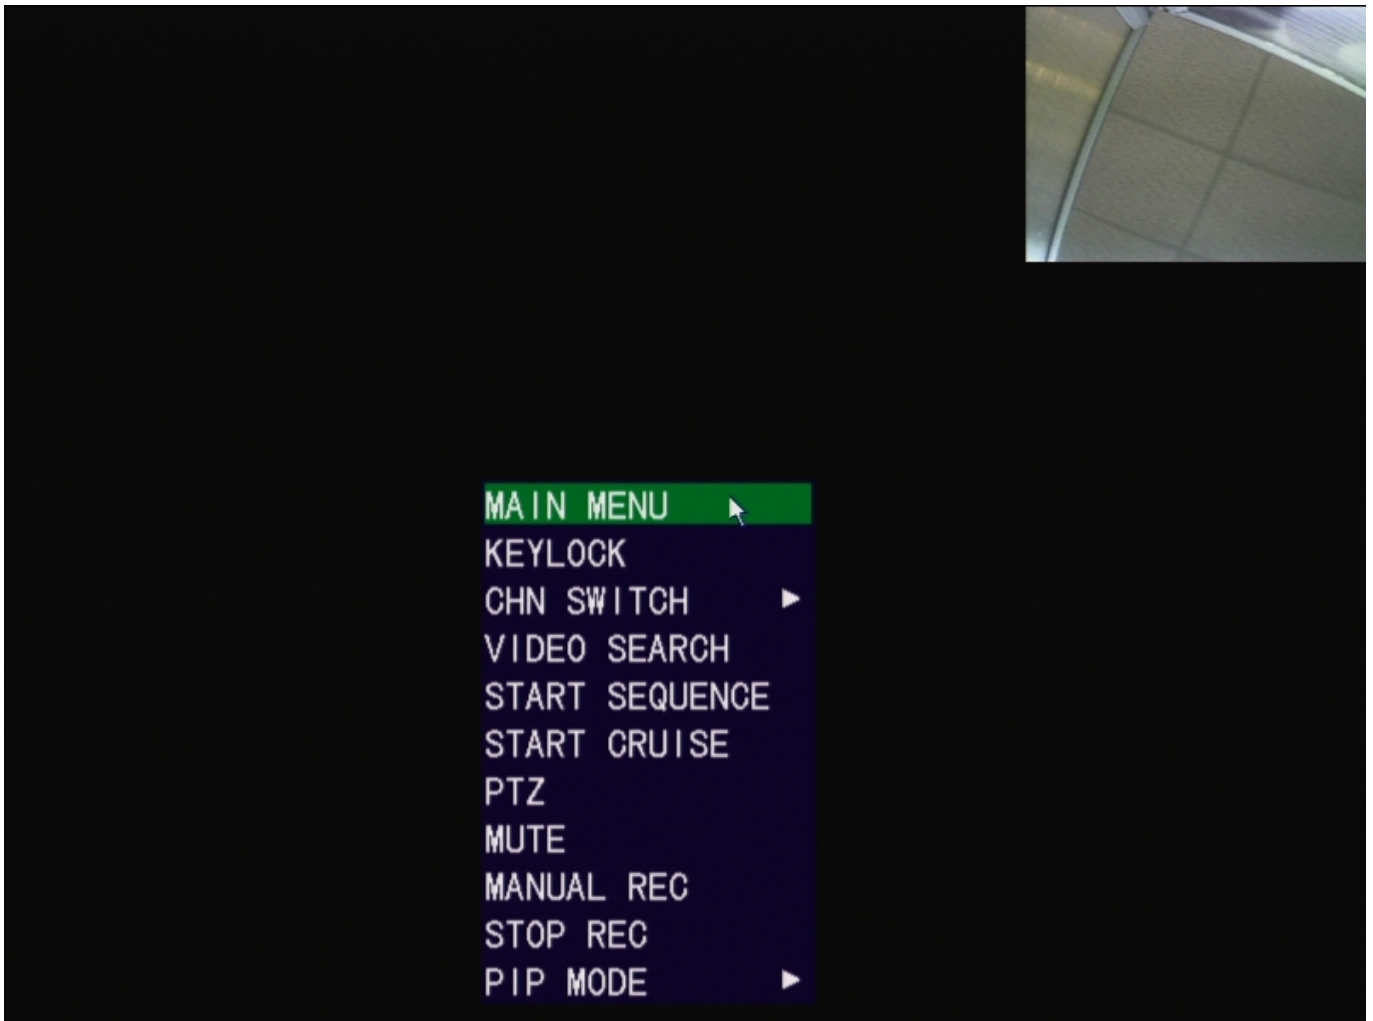

Step 2: Select Advanced

DVR Systems



Step 3: Select Alarm

DVR Systems



Step 4: Change 'Alarm Manage Output' to 05 and also change 'Buzzer' to 05

DVR Systems

I/O CHANNEL	CH1	CH2	CH3	CH4
I/O ALARM	NO	NO	NO	NO
HDD LOSS	OFF	HDD SPACE		OFF
VIDEO LOSS	OFF			
ALARM MANAGE OUTPUT	OS	BUZZER	OS	
Post Alarm Recording		1MIN		


EMAIL SETUP

Alarm duration time setup

NEXT PAGE DEFAULT APPLY EXIT

Step 5: Hit 'Apply' at the bottom of the page

DVR Systems

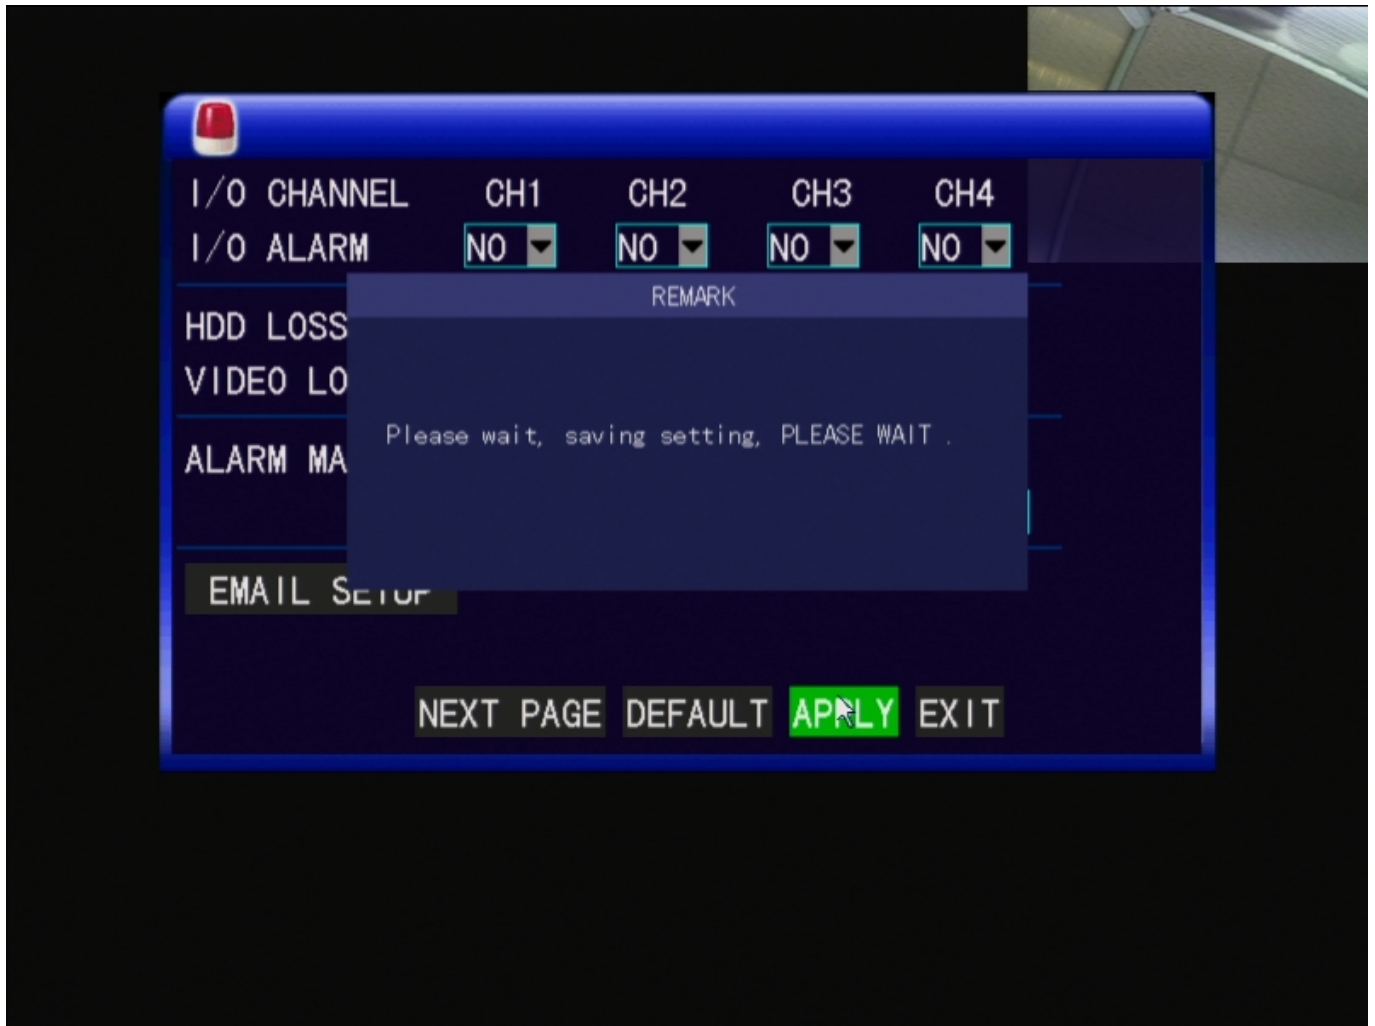

Step 6: Hit 'Ok' when the system says 'Save Successfully'

DVR Systems



The alarms on the DVR should have stopped beeping now.

Unique solution ID: #1113
Author: Alex Crewell
Last update: 2013-08-17 00:16