# DVR Systems How to Setup Zmodo IP Cameras to Record on Motion Detection without an NVR.

The current version of ZViewer for PC Computers does not yet support motion detection recording, so we recommend using the free 3rd party software Genius Vision if you would like to set your Zmodo IP Camera to record when motion is detected.

Genius Vision can be downloaded safely from the manufacturer's website here: <u>http://www.geniusvision.net/community.html</u>

The complete PDF manual for Genius Vision can be downloaded safely from the manufacturer's website here: <u>http://geniusvision.net/snapshot/GVUserManual.pdf</u>

Once Genius Vision has been successfully downloaded and opened, please complete these steps to add an IP Camera to Genius Vision:

1) From the Main Menu, select New Objects > New Channel> Camera Setup.

🕞 Ger	nius Vision I	NVR Soft	ware CmE - 127.0.0.1						
2	0 🧧		III III III III III III		3×6	🔟 🕨 🗙 Sim	ple toolba		
Live	Playback	SyncPlay				LIVE    <			
2 2	and determined		Live Mode			() ==			
C	onfig System		Config Console	Config Stora	ge	Panel One	P		
F	ind Cameras		New Channel	New Object					
	All channels All connect		Tree View		100000	remote NVR new user			
					Add a new user group Add new trigger policy Add a new map				
					Add a r	new ext. map			

- 2) From the Camera Setup tab, select RTSP video source as the Driver.
- 3) Check the box labeled "Use TCP streaming."

Page 1 / 9 (c) 2025 Jeremy Schultz <itmanager@eptco.com> | 2025-08-30 19:02 URL: https://kb.zmodo.com/index.php?action=artikel&cat=163&id=306&artlang=en

4) In the URL field, enter the camera's RTSP url using this template:

The RTSP address of the main stream (720p) is:

rtsp://xxx.xxx.xxx:10554/tcp/av0\_0

The RTSP address of the sub stream (VGA) is:

rtsp://xxx.xxx.xxx:10554/tcp/av0\_1

("xxx.xxx.xxx.xxx" is the device's IP address as reported by the IPC Search tool.)

5) Enter the correct login and password for the camera into the login fields.

The end result will resemble this image:

Video Setup   Preview   Scheduled Recording   PTZ Setup   External PTZ mod   Video Analytics Setup   I Do module     Description   URL   rtsp://192.168.1.128:10554/tcp/av0_0   Use TCP streaming   Enter login information   admin   Password   Basic Recording	Camera Setup	Camera Setup Clone Settings	5			
Scheduled Recording     PTZ Setup     External PTZ mod     Video Analytics Setup     I Do module     Description     URL        rtsp://192.168.1.128:10554/tcp/av0_0           Enter login information     admin			Camera Driv	ver Inform	ation	
Please input a name that is unique throughout the do Please input a name that is unique throughout the do Please input a name that is unique throughout the do Webcam(DirectShow) Please input a name that is unique throughout the do Webcam(DirectShow) Please input a name that is unique throughout the do Webcam(DirectShow) Please input a name that is unique throughout the do Webcam(DirectShow) Please input a name that is unique throughout the do Webcam(DirectShow) Please input a name that is unique throughout the do Webcam(DirectShow) Please input a name that is unique throughout the do Webcam(DirectShow) Please input a name that is unique throughout the do Webcam(DirectShow) Please input a name that is unique throughout the do Webcam(DirectShow) Please input a name that is unique throughout the do Webcam(DirectShow) Please input a name that is unique throughout the do Webcam(DirectShow) Please input a name that is unique throughout the do Webcam(DirectShow) Please input a name that is unique throughout the do Webcam(DirectShow) Please input a name that is unique throughout the do Webcam(DirectShow) Please input a name that is unique throughout the do Please input a name that is unique throughout the do Please input a name that is unique throughout the do Please input a name that is unique throughout the do Please input a name that is unique throughout the do Please input a name that is unique throughout the do Please input a name that is unique throughout the do Please input a name that is unique throughout the do Please input a name that is unique throughout the do Please input a name that is unique throughout the do Please input a name that is unique throughout the do Please input a name that is unique throughout the do Please input a name that is unique throughout the do Please input a name that is unique throughout the do Please input a name that is unique throughout the do Please input a name that is unique throughout the do Please input a name that is unique the		Channel name	Camera 1			
<ul> <li>Video Analytics Setur</li> <li>IO module</li> <li>Description</li> <li>URL rtsp://192.168.1.128:10554/tcp/av0_0</li> <li>Video Source</li> <li>Remote channel</li> </ul>			Ple	ease input a r	ame that is uniq	ue throughout the domai
IO module      Description      URL      rtsp://192.168.1.128:10554/tcp/av0_0      Use TCP streaming      Enter login information      admin      Password      ••••••		Driver	IP Cam		Webcam(Dire	ectShow)
URL       rtsp://192.168.1.128:10554/tcp/av0_0         Image: Constraining information       admin         Password       ••••••			RTSP video source	e	🔿 Remote char	nel
Use TCP streaming Enter login information admin Password ••••••		Description				
Enter login information admin Password ••••••		URL	rtsp://192.168.1.12	28:10554/tcp/	/av0_0	
			Use TCP streamin	9		
Basic Recording 🔄 Unconditional recording		Enter login information	admin	Password		
		Basic Recording	Unconditional reco	ording		
Others Disabled		Others	Disabled			
	• III					


6) Click "Apply" to save this camera to Genuis Vision. You should now see the video stream of your camera in the channel grid.

Live Mode Config System Config Console Config Storage Find Cameras New Channel New Objects Tree View All channels All connections All connections No Channel	ive Playback SyncPlay		LIVE    📢		
Find Cameras     New Channel     New Objects       Tree View     No connections       All channels     All connections	Live Mode		Panel One	5	
Find Cameras       New Channel       New Objects         Tree View       New Channels       New Camera 1         All channels       All connections       New Camera 1	Config System Config Console	Config Storage	Camera 👁 🔥 🔵 🔵		No Channel
Tree View  All channels  All connections  All connections	Find Cameras New Channel	New Objects	LINDANA		NO CHANNEL (PL 2)
Camera 1 All connections	Tree View		A states		Ropped
All connections	All channels		and the second		
	<b>a</b>		Louis		
No Channel No Channel No Channel			11 House		
			No Channel	No Channel	No Channel
			NO DURINGL(FE.E)	NO GUNNEL (PS. 7) Discont	NO COMINEL (FS. 8) Discont

You can now repeat these steps if you would like to add any additional cameras to Genius Vision.

Genius Vision can easily be setup to record when motion is activated by any of the cameras that are configured on Genius Vision. Follow these directions to set up motion recording.

1) Click the "Config System" button.

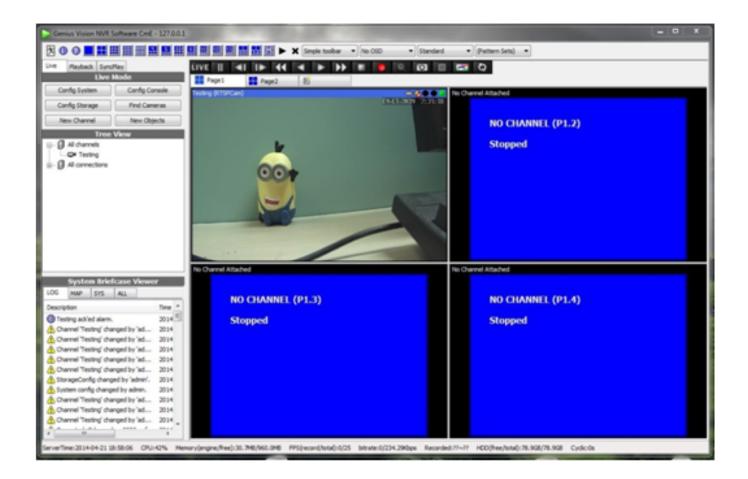

2) In the System Configuration window, select the "Recording Storage Setup" option.

In that menu, click the enabled box until it has a check mark.

Click the box next to MaxSize\_GB and Specify the amount of space to make available for recording.

The default Directory is C:\gvrec\ you can change this in the directory window if you prefer the file to go to a different location.

Click Apply to save these settings.

System Configuration Local Console Configuratio System Configuration Recording Storage Se Sitema PTZ module Sitema PTZ	Dire	ectories Add Delete			(Default) (Ct)(vrec\(Enabled) Dt\gvrec\		×
- System Info. - A Hotkey List - Calculator	Storage	Dire	ectory	,	C:\gvrec\	Based On	Default 💌
NNR Connections     NNR Connections     NNR Connects     All Channels     Phi Local Channels     Trigger Policy     Maps     Naps     Pattern Page     Users     User Groups     Export/Import     Plugins	SafeF	Enabled laxSize_GB reeSize_GB FileSize_MB		yes 83 5 100	83 5	Defines maximum of Defines minimum s	and playback on this directory used size in G8 afe free space in G8. <sup>7</sup> a single file in M8.
< <u> </u>						Apply	OK Cancel

3) Right-click on your camera image, and select Video Setup from the menu that appears.

In the Camera Setup window, check the box next to PreRecord and ActivityInterval, then scroll down and check the box next to VideoDetect.

If you would like for the client software to flash red when motion is detected, you can also check the box next to ActivityAlarm.


mera Setup	Chann	el T	Testing	Driver RTSPCam	Canera Setup		Chann	el Testing		Driver RTSPCam
Video Setup Preview Scheduled Recording	Configuration Se Add Delete	ts D	lefault Configuration 2		Wideo Setup      Wideo Setup      Scheduled Recording      PTZ Setup	Configu Add	ation Se Delete	ts Default	on 2	
PTZ Setup External PTZ moc	Descriptio		Configuration 2	Based On Default	External PTZ moc		escriptic	e Configurati	ion 2	Based On Default *
Video Analytics Setup	Record RTSP RTSP Ad	ance	d		- Wideo Analytics Setup - (1) 10 module	Record RTSP	RTSP Adv	anced		
10 module	PreRecord I	10	10	Enter pre-record interval in seconds. A Note this value requires sufficient memory to work correctly.		ViossAl	arm 🔳		eff	Select alarm type for video loss
	ActivityInterval	10	10	Maximum interval in seconds to consider two activities as one. Note this value also serve the purpose of post-record interval.		StereoT		-	default	Select stereo-type of camera     Video analytics mode
	ManualRecord	10	10	Minimum manual record interval. If two manual record are requested within this interval, they are considered as an one extended		TranscoderStr	am 🔳	-	Auto	Video stream used for server transcoding. This setting affects 3G Streaming, JPEG Streaming, Server Video Detect.
	PtzCtrlInterval		- 30	manual record request. Maximum interval in seconds to consider two PTZ control activities as		36 Stream	_		off	<ul> <li>3G Streaming, can be viewed with a supported portable device</li> </ul>
	DIOActivity		dsabled	Opt to treat DL/DO as activity.		JPEG Stream			off	<ul> <li>JPEG Streaming, can be viewed with most PC and portable devices</li> <li>Watermark applied to video data,</li> </ul>
	StreamActiveType	-	always	Selective streaming of video. always:     Always streaming, view only: Only		Watern	ark 🔳		off	<ul> <li>any modification to the data will be detected</li> </ul>

4) After enableing the motion detection-based recording, create the region for  $$P_{\mbox{Page 5}\,/\,9}$$ 

(c) 2025 Jeremy Schultz <itmanager@eptco.com> | 2025-08-30 19:02


URL: https://kb.zmodo.com/index.php?action=artikel&cat=163&id=306&artlang=en

motion detection. To do this, go to the Video Analytics Setup portion of the Camera Setup window. In that section click S-Motion, this adds an S-Motion bubble and indicator dot to the preview window.

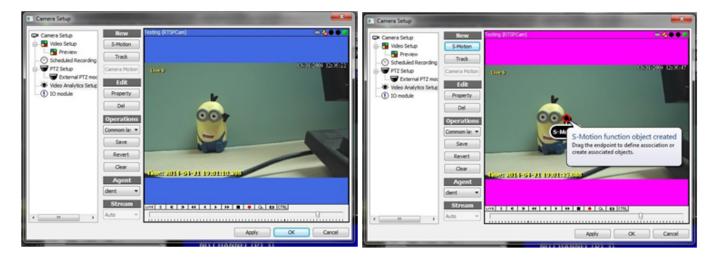

5) Click and drag the indicator dot to the desired area in the preview image. This opens a "Create definition of..." dropdown menu.


- Selecting "Region of interest" creates an area which is exclusively rectangular in shape, and can be move or resized as needed.
- Selecting "Region of interest(polygon)" creates a rectangular shape which can be modified to any polygonal shape by adding/removing vertices.
- Selecting "Object size" attempts to have the software determine the region based on the area the indicator dot was dragged to. This option is not recommended.

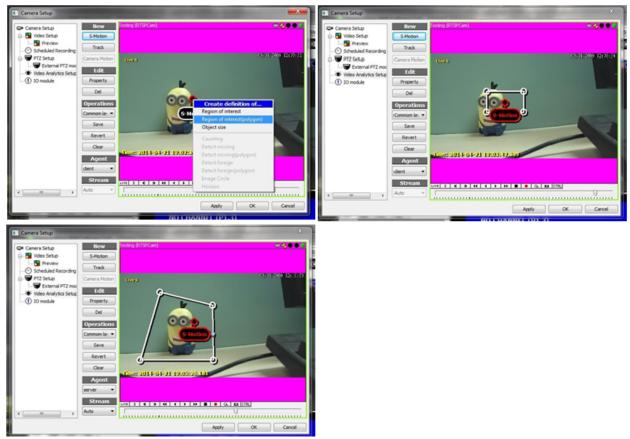

6) The Created area is where motion will be detected. Once set, click "Apply," and then "OK" to close the Camera Setup window.

7) While motion detection is configured correctly, the camera icon under All channels should have an orange circle icon on it.

When motion is detected, and the channel is recording, the middle dot in the top of the camera screen will turn from black to red, and the camera icon under All channels will also turn red, as shown below.

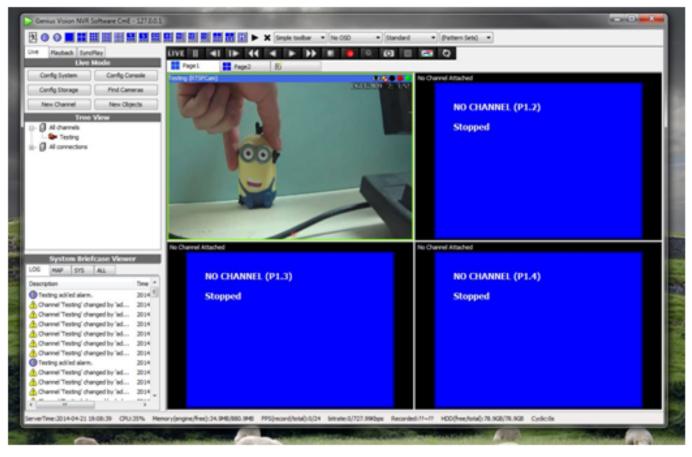

8) View recorded files sections in the drive previously specified (C:\gvrec\ by default). Once in the folder, double click on the surveillance footage file desired from the list.

Each file will record about 1GB of footage before a new file is created. Depending on the frequency of recording, files can span a longer or shorter period of time. Once you double click, the footage automatically opens in the Genius Vision playback software and can be played back from there.

	1000	1.00		00	×
🕒 🕤 - 🔎	Computer + Local D	isk (C:) 🕨 gvrec		• 49 Search gyrec	P
Organize 👻	Include in library •	Share with +	New folder	)H • 🗂	0
★ Favorites	* Name	<u>^</u>	Date modified	Туре	Size
32 Recent Pla	€ nv_0001		3/20/2014 12:30 PM	Surveillance Foota	1,026
E Desktop	♥ nv_0002		3/25/2014 2:28 PM	Surveillance Foota	1,027
Download	€ nv_0003		4/21/2014 2:08 PM	Surveillance Foota	1,024
	∽ nv_0004		4/24/2014 1:37 PM	Surveillance Foota	465
Cibraries					
Documen	1.				
J Music	-				
Pictures					
videos					
🛤 Computer					
Local Disk					
share (\\1					- 1
Network					
1 4 ite	Ims				_
					- 1
					_

Page 8 / 9 (c) 2025 Jeremy Schultz <itmanager@eptco.com> | 2025-08-30 19:02 URL: https://kb.zmodo.com/index.php?action=artikel&cat=163&id=306&artlang=en

Unique solution ID: #1306 Author: Amanda Mayer Last update: 2014-03-24 10:17

> Page 9 / 9 (c) 2025 Jeremy Schultz <itmanager@eptco.com> | 2025-08-30 19:02 URL: https://kb.zmodo.com/index.php?action=artikel&cat=163&id=306&artlang=en