

DVR Systems

Creating a Free Zmodo DNS Account for Use with Zmodo DVRs

Zmodo is proud to introduce our new dynamic DNS service, which will allow our customers to automatically update their public IP addresses with our server and connect remotely to their devices through a friendly, easy to use interface. Getting everything set up is straightforward and should only take a few minutes.

Step 1. Download the Windows Client from zmododns.com

The screenshot shows the Zmodo DDNS website. At the top, there is a blue header with the Zmodo logo and the text "DDNS". To the right of the logo are three buttons: "Sign In", "Sign Out", and "New User?". Below the header is a light blue banner that says "Welcome to Zmodo Dynamic DNS".

On the left side, there is a text block: "To use our DDNS system all you need to do is create an account here, enter your login information into your ZMODO NVR with an internet connection and check the web site for a link straight to your NVR!". Below this is a "NEW FEATURE!" section with a sub-heading "Download the new ZMODODNS standalone application for Windows! You can now update your external IP address automatically from your Windows PC! Un-zip the folder anywhere and click on 'Zmododns.exe'. Login to your Zmodo DNS account from there." At the bottom of this section is a red button with white text that says "DOWNLOAD Application".


On the right side, there is a diagram illustrating the process. At the top, it says "Zmodo DNS server updates your domain name automatically" with a box containing "xxxx.zmododns.com". Two arrows point from this box to two separate steps. The left step is "Login to your Zmodo DNS account on your NVR or through a Windows PC" with a Zmodo logo icon. The right step is "Check your NVR from any Internet Explorer Browser" with an icon of a person at a computer.

At the bottom of the right side, there is a blue button that says "Purchase Zmodo products here" and a logo for "CCTVHotDeals".

DVR Systems

Extract the download using 7Zip.

Open the extracted folder, then open the program called Zmododns.

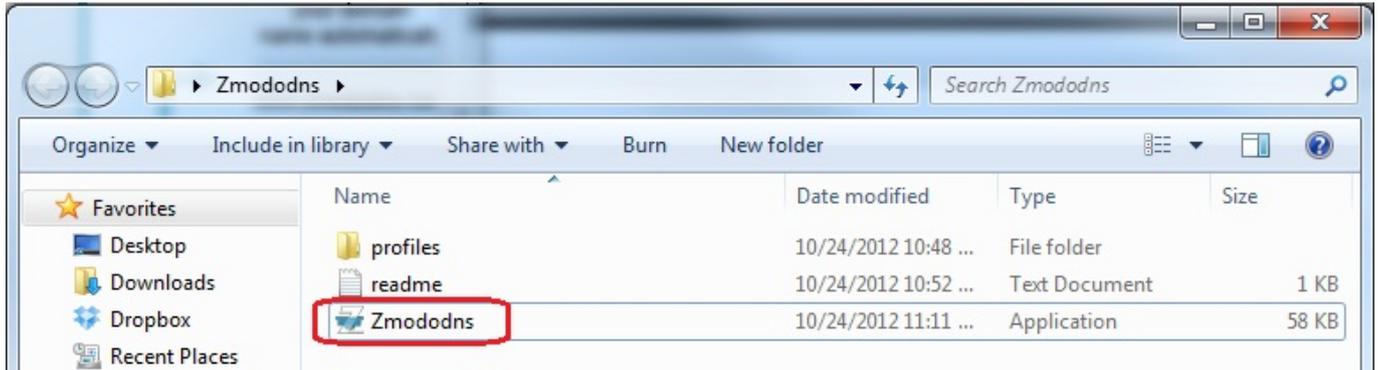

Step 2. Sign up for an account at zmododns.com


Welcome to Zmodo Dynamic DNS

To use our DDNS system all you need to do is create an account here, enter your login information into your ZMODO NVR with an internet connection and check the web site for a link straight to your NVR!

NEW FEATURE!

Download the new ZMODODNS standalone application for Windows! You can now update your external IP address automatically from your Windows PC! Un-zip the folder anywhere and click on "Zmododns.exe". Login to your Zmodo DNS account from there.

[DOWNLOAD Application](#)

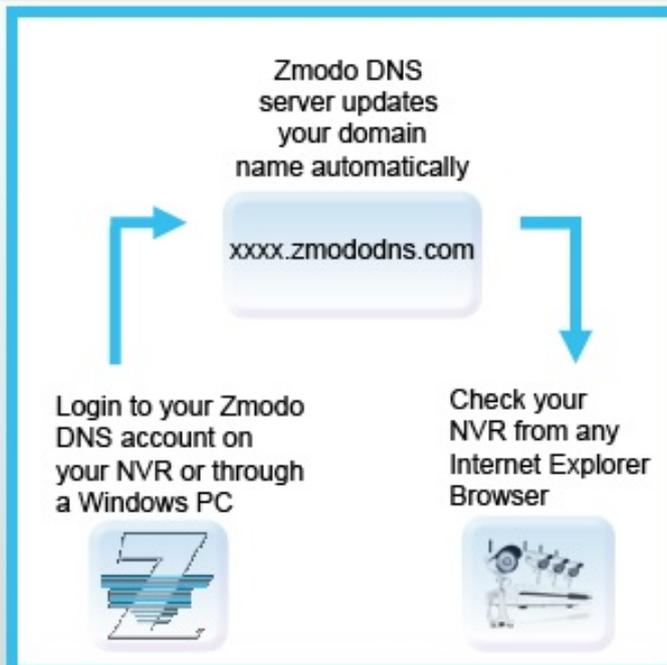


Purchase Zmodo products here!

CCTVHotDeals

Choose your desired username and password at our site. You will be informed if an existing user already exists, or if your email is already registered (limit 1 account per email).

Create an Account

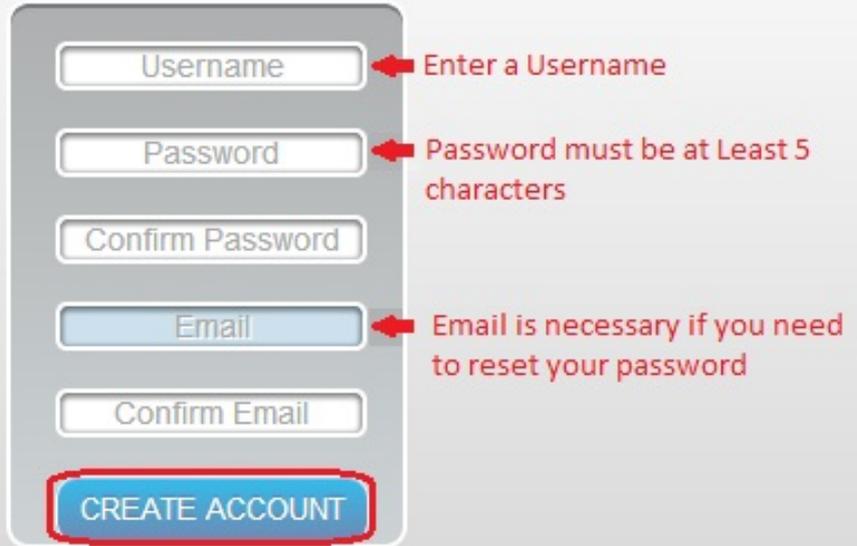

The form contains the following fields and a button:

- Enter a Username
- Password must be at Least 5 characters
-
- Email is necessary if you need to reset your password
-
-

Step 3. Create domain name(s) for use with your device(s)

DVR Systems

The screenshot shows the Zmodo DDNS website interface. At the top, there is a navigation bar with the Zmodo logo, 'DDNS', and links for 'Sign In', 'Sign Out', and 'New User?'. Below this is a blue banner that says 'Welcome to Zmodo Dynamic DNS'. The main content area is divided into several sections:

- Introduction:** A paragraph explaining that to use the DDNS system, users need to create an account, enter login information into their ZMODO NVR, and check the website for a link to their NVR.
- NEW FEATURE!** A section titled 'NEW FEATURE!' with a sub-heading 'Download the new ZMODODNS standalone application for Windows! You can now update your external IP address automatically from your Windows PC! Unzip the folder anywhere and click on "Zmododns.exe". Login to your Zmodo DNS account from there.' Below this is a blue button labeled 'DOWNLOAD Application'.
- Diagram:** A flowchart showing the process: 'Zmodo DNS server updates your domain name automatically' (pointing to a box with 'xxxx.zmododns.com'), 'Login to your Zmodo DNS account on your NVR or through a Windows PC' (pointing to a computer icon), and 'Check your NVR from any Internet Explorer Browser' (pointing to a browser icon).
- Purchase Link:** A blue button labeled 'Purchase Zmodo products here!' with the 'CCTVHotDeals' logo below it.

Once signed in, you will need to add a domain. This will be the address used to access your device. Each account can request up to 5 domains for use with multiple devices at different IP addresses. Click on "Add Domain"

DVR Systems



[Sign In](#) [Sign Out](#) [New User?](#)

Hi, Demo

These are your registered domain names with their current IP. (Max 5)

| Unassigned D |
|--------------|--------------|--------------|--------------|--------------|
| | | | | |

New Zmodo DNS Functionality!

You may now type in your Zmododns name into any browser from any PC and access your Zmodo product!

Enter the desired domain name into the blank and hit submit. If the name is available, the user will be informed of a successful domain creation. Otherwise, the user will need to choose a different name.

Add Domain

Enter your desired domain address.

ADD DOMAIN

RETURN HOME

← Enter your desired domain name here

If available, your domain will show up in this layout: [mydvr.zmododns.com](#)

Step 4. Login to your account on the Zmododns Windows Client that you downloaded.

DVR Systems



Zmodo DNS

Zmodo


Username
demo save user

Password

[Forgot password?](#)
[Need an account?](#)

Login

Once logged in, check the "auto update" check-box to enable the software to automatically update your IP address every two hours.

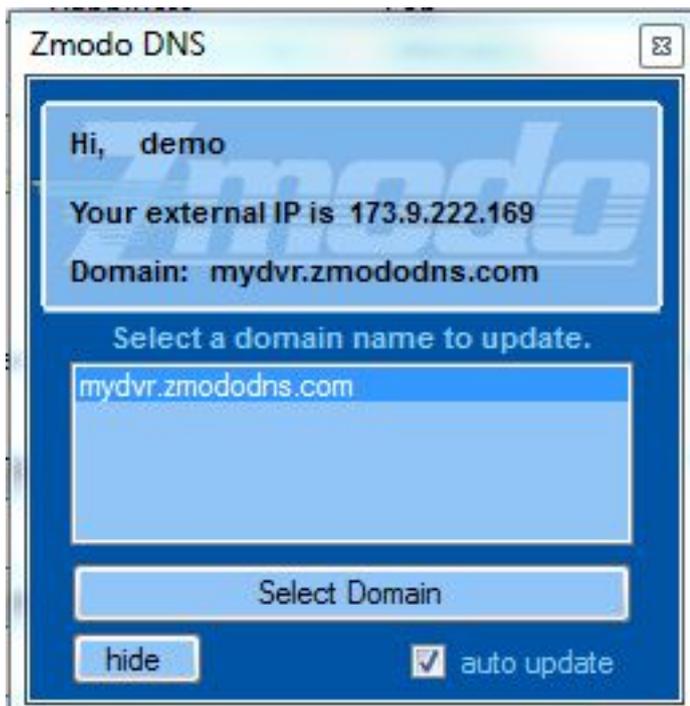

Zmodo DNS

Hi, demo

Your external IP is 173.9.222.169
Domain: mydvr.zmododns.com

Select a domain name to update.

mydvr.zmododns.com

Select Domain

hide auto update

DVR Systems

The Zmododns Windows Client software must be running at all times on a PC that is connected to the same router that your DVR is connected to. There is a "Hide" function on the software if you'd prefer to minimize the software to your bottom right Notification Area.

Unique solution ID: #1080

Author: Alex Crewell

Last update: 2013-08-16 18:45