

NVR and IP Cameras

Creating a Free Zmodo DNS Account for Use with Zmodo DVRs

Zmodo is proud to introduce our new dynamic DNS service, which will allow our customers to automatically update their public IP addresses with our server and connect remotely to their devices through a friendly, easy to use interface. Getting everything set up is straightforward and should only take a few minutes.


Step 1. Download the Windows Client from zmododns.com

The screenshot shows the Zmodo DDNS website. At the top, there is a blue header with the Zmodo logo and 'DDNS' text. To the right of the logo are links for 'Sign In', 'Sign Out', and 'New User?'. Below the header is a light blue banner that says 'Welcome to Zmodo Dynamic DNS'. The main content area is divided into two columns. The left column contains text explaining how to use the DDNS system and a 'NEW FEATURE!' section about a standalone application for Windows. The right column features a diagram showing the workflow: 'Zmodo DNS server updates your domain name automatically' (with the example domain 'xxxx.zmododns.com') leading to 'Login to your Zmodo DNS account on your NVR or through a Windows PC' and 'Check your NVR from any Internet Explorer Browser'. At the bottom of the page, there is a blue button labeled 'DOWNLOAD Application' and a banner for 'CCTV Hot Deals' with the text 'Purchase Zmodo products here!'.

NVR and IP Cameras

Extract the download using 7Zip.

Open the extracted folder, then open the program called Zmododns.

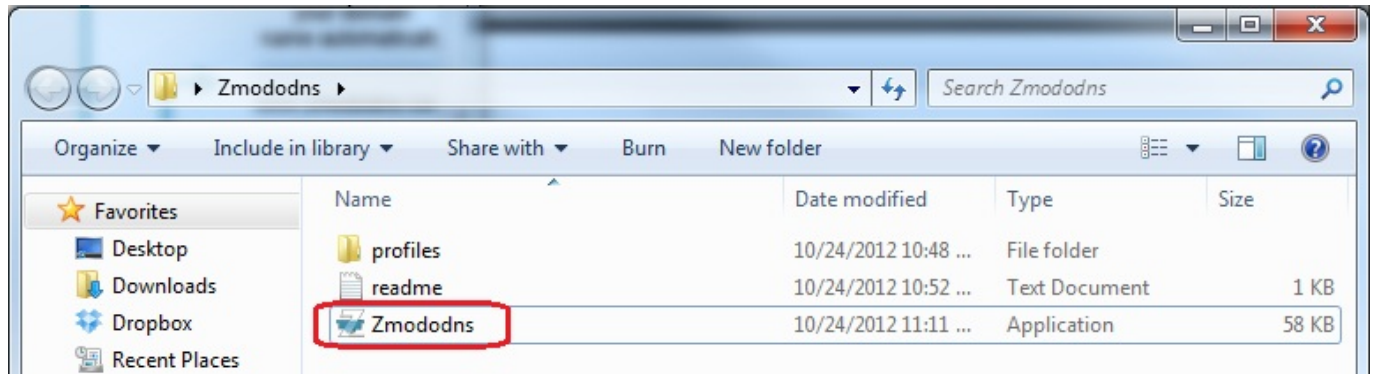

Step 2. Sign up for an account at zmododns.com

NVR and IP Cameras



[Sign In](#)

[Sign Out](#)

[New User?](#)


Welcome to Zmodo Dynamic DNS

To use our DDNS system all you need to do is create an account here, enter your login information into your ZMODO NVR with an internet connection and check the web site for a link straight to your NVR!

NEW FEATURE!

Download the new ZMODODNS standalone application for Windows! You can now update your external IP address automatically from your Windows PC! Un-zip the folder anywhere and click on "Zmododns.exe". Login to your Zmodo DNS account from there.

[DOWNLOAD Application](#)

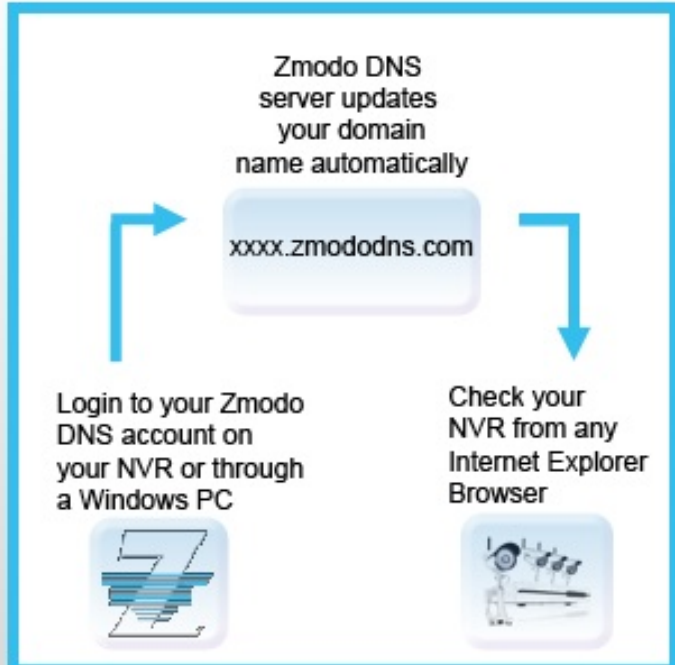

Purchase Zmodo products here!



Choose your desired username and password at our site. You will be informed if an existing user already exists, or if your email is already registered (limit 1 account per email).

NVR and IP Cameras

Create an Account

The screenshot shows a registration form with the following fields and annotations:

- Username**: An annotation with a red arrow points to the field with the text "Enter a Username".
- Password**: An annotation with a red arrow points to the field with the text "Password must be at Least 5 characters".
- Confirm Password**: A standard text input field.
- Email**: An annotation with a red arrow points to the field with the text "Email is necessary if you need to reset your password".
- Confirm Email**: A standard text input field.
- CREATE ACCOUNT**: A blue button with a red border, highlighted by a red rectangle.

Step 3. Create domain name(s) for use with your device(s)

NVR and IP Cameras

The screenshot shows the Zmodo DDNS website interface. At the top, there is a navigation bar with the Zmodo logo, 'DDNS', and links for 'Sign In', 'Sign Out', and 'New User?'. Below this is a blue banner that says 'Welcome to Zmodo Dynamic DNS'. The main content area is divided into several sections:

- Introduction:** A paragraph explaining that to use the DDNS system, users need to create an account, enter login information into their ZMODODNS NVR with an internet connection, and check the website for a link to their NVR.
- NEW FEATURE!** A section titled 'NEW FEATURE!' with a sub-heading 'Download the new ZMODODNS standalone application for Windows! You can now update your external IP address automatically from your Windows PC! Unzip the folder anywhere and click on "Zmododns.exe". Login to your Zmodo DNS account from there.' Below this is a blue button labeled 'DOWNLOAD Application'.
- Diagram:** A flowchart showing the process: 'Zmodo DNS server updates your domain name automatically' (pointing to a box with 'xxxx.zmododns.com'), 'Login to your Zmodo DNS account on your NVR or through a Windows PC' (pointing to a computer icon), and 'Check your NVR from any Internet Explorer Browser' (pointing to a browser icon).
- Purchase Link:** A blue button labeled 'Purchase Zmodo products here!' with the 'CCTVHotDeals' logo below it.

Once signed in, you will need to add a domain. This will be the address used to access your device. Each account can request up to 5 domains for use with multiple devices at different IP addresses. Click on "Add Domain"

NVR and IP Cameras

Zmodo DDNS [Sign In](#) [Sign Out](#) [New User?](#)

Hi, Demo

These are your registered domain names with their current IP. (Max 5)

Unassigned D	Unassigned D	Unassigned D	Unassigned D	Unassigned D

New Zmodo DNS Functionality!

You may now type in your Zmododns name into any browser from any PC and access your Zmodo product!

ADD DOMAIN

DELETE DOMAIN

Enter the desired domain name into the blank and hit submit. If the name is available, the user will be informed of a successful domain creation. Otherwise, the user will need to choose a different name.

NVR and IP Cameras

Add Domain

Enter your desired domain address.

← Enter your desired domain name here

If available, your domain will show up in this layout: mydvr.zmododns.com


Step 4. Login to your account on the Zmododns Windows Client that you downloaded.

NVR and IP Cameras



The screenshot shows the Zmodo DNS login interface. At the top, the Zmodo logo is displayed in a blue banner. Below the logo, the text "Zmodo DNS" is visible in the window title bar. The main content area has a blue background. It features a "Username" field with the text "demo" and a "save user" checkbox. Below that is a "Password" field with masked characters. There are two links: "Forgot password?" and "Need an account?". At the bottom, there is a "Login" button.

Once logged in, check the "auto update" check-box to enable the software to automatically update your IP address every two hours.

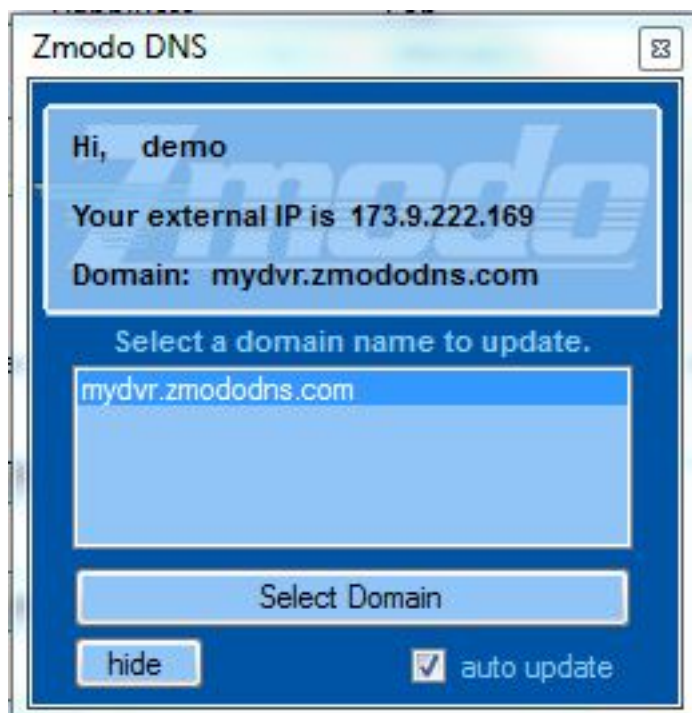

The screenshot shows the Zmodo DNS dashboard after a successful login. The window title is "Zmodo DNS". The main content area has a blue background. It displays a greeting "Hi, demo" and the text "Your external IP is 173.9.222.169" and "Domain: mydvr.zmododns.com". Below this, there is a section titled "Select a domain name to update." with a dropdown menu showing "mydvr.zmododns.com". A "Select Domain" button is located below the dropdown. At the bottom, there is a "hide" button and a checked "auto update" checkbox.

NVR and IP Cameras

The Zmododns Windows Client software must be running at all times on a PC that is connected to the same router that your DVR is connected to. There is a "Hide" function on the software if you'd prefer to minimize the software to your bottom right Notification Area.

Unique solution ID: #1080

Author: Alex Crewell

Last update: 2013-08-16 18:45