

ZP-NB14

Wireless Kit NVR Password Reset


If you are unable to login to the white NVR box from the wireless kits ([ZMD-NV-SBN4](#) or [ZP-NB14](#)), first trying using the defaults:

Username: admin (all lowercase)

Password: 111111

If the defaults are not working, you can restore the password to factory defaults by removing the top case of the NVR and jumping the two pins on the motherboard as shown below.

ZP-NB14

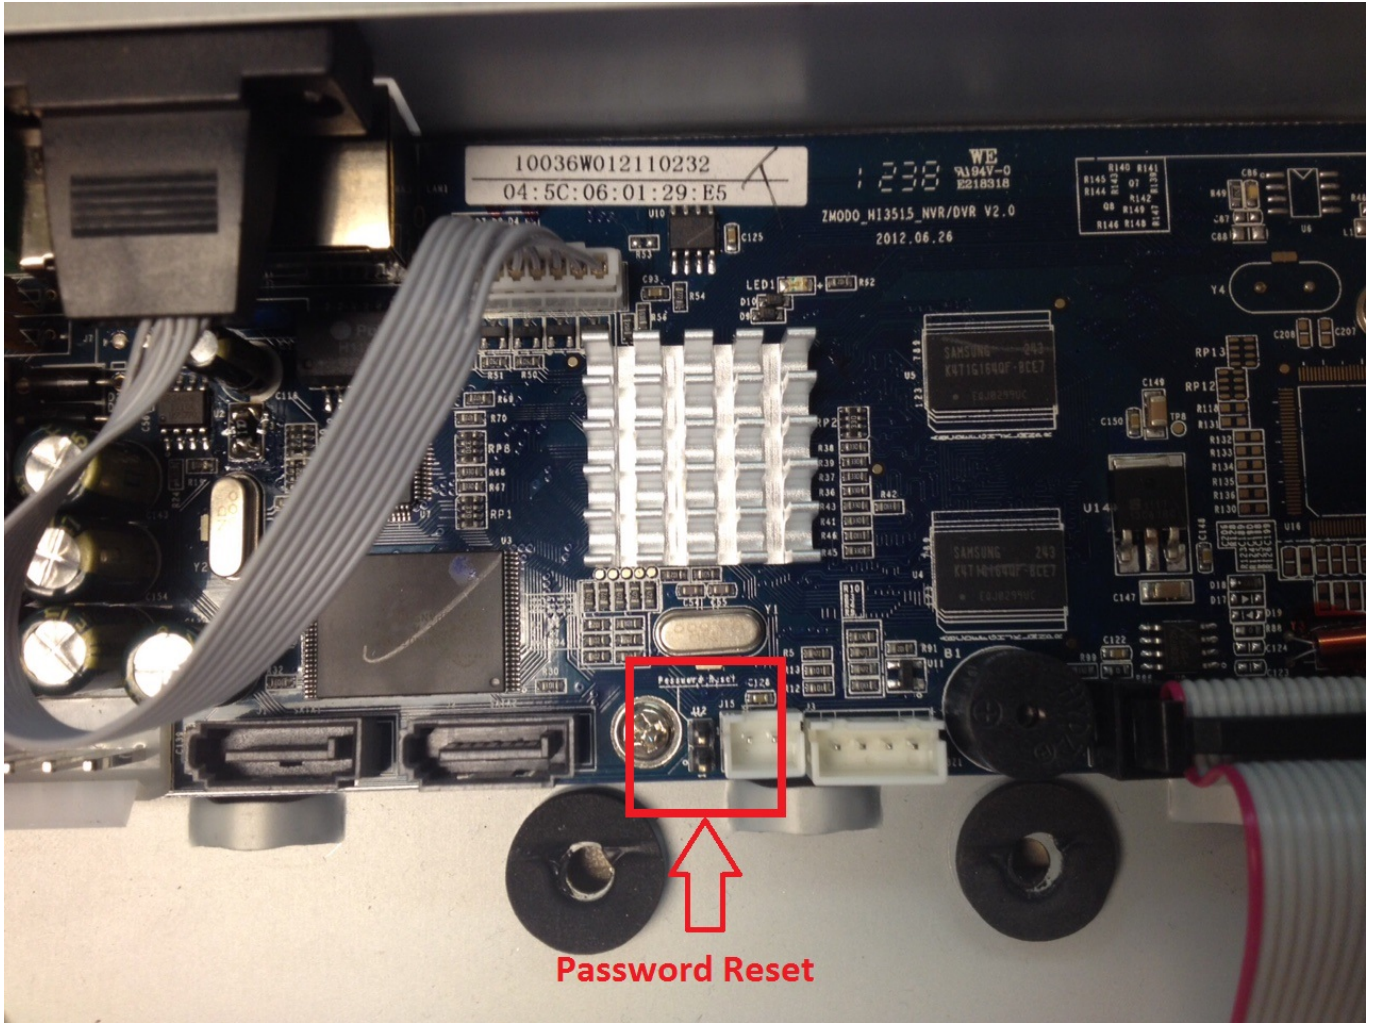

ZP-NB14

To do this, you only need to use a flathead screwdriver or metal paper clip to connect the two pins together. Make sure the metal of the screwdriver or paper clip connects both pins to reset the password. After around 20-30 seconds the NVR should automatically reboot and now be at the default username and password.

Unique solution ID: #1361

Author: Ed

Last update: 2015-05-19 15:51