

Analog Cameras

Why is there a button on my camera's cable?

Some current dome cameras have a button on the cable which can adjust some image settings.



The default settings are usually going to provide the best picture quality, so you do not need to use this toggle switch at all if you are satisfied with the brightness settings that the camera displays when you first plug in the camera.

If you want to adjust the brightness to better suit the environment that the camera is installed in, please refer to the following Toggle Feature manual!

Toggle button functionality:

Quick Press and Release: Enter the toggle menu interface.

Press In and Hold: Go back to previous page.

Press Left: Scroll left within the menu options.

Press Right: Scroll right within the menu options.

Press Up: Scroll up within the menu interface.

Press Down: Scroll down in the menu interface.

Analog Cameras

Toggle Menu Options:

1.Lens

Manual: changes camera lens focus to manual control

Auto: automatically focuses camera lens

2.Shutter/AGC(Automatic Gain Control)

Manual: amplification/gain process managed manually by user

Auto: controls amplification/gain process automatically if the scene illumination falls under a usable level.

3.White Bal (White Balance)

Push (indicates that user 1, user 2, etc can be pressed to change personal user settings)

User 1

B gain

R gain

User 2

B gain

R gain

Anti CR (anti-color rolling)

Manual

Brightness

Push lock

Analog Cameras

ATW: Auto Tracing White Balance

4.Backlight

BLC (Black light compensation)

HLC (Highlight compensation)

5.Pict. Adjust

Mirror (inverts the camera image on screen)

Brightness

Contrast

Sharpness

HUE (controls image color saturation level)

6.ATR (brightness enhancement)

Off

On

7.Motion Detection

Detect Sense

Block display

Off/on

Monitor area: selects the depth of field for motion detection

Off/on

Analog Cameras

Area Sel. (Area Selection)

-1/4, 2/4, 3/4, 4/4

Top

Bottom

Left

Right

Return

8.Privacy

On

Off

9.Day/Night

On/off

B/W (Black/White)

Auto

Color

Burst

On/off

Delay CNT

Day night

Night day

10.NR

Analog Cameras

Y level

C level

11.Camera I.D.

On (press and hold to set name)

Off

12.Sync

13.Language

-English

-Chinese

-German

-French

-Portuguese

-Spanish

-Russian

14.Camera Reset: restores default settings for camera

15.Next

16.Exit

17.Save All

Analog Cameras



Unique solution ID: #1101

Author: Alex Crewell

Last update: 2013-10-23 13:15