


ZMD-DD-SAN4

Reset Password to Factory Defaults for SBN4, SBN8, SBN6, SAN4, and SAN8

To restore your password to factory defaults, you will need to jump the two pins on the motherboard as shown below.

To do this, you only need to use a flathead screwdriver or metal paper clip to connect the two pins together. Make sure the metal of the screwdriver or paper clip connects both pins to reset the password.

ZMD-DD-SAN4

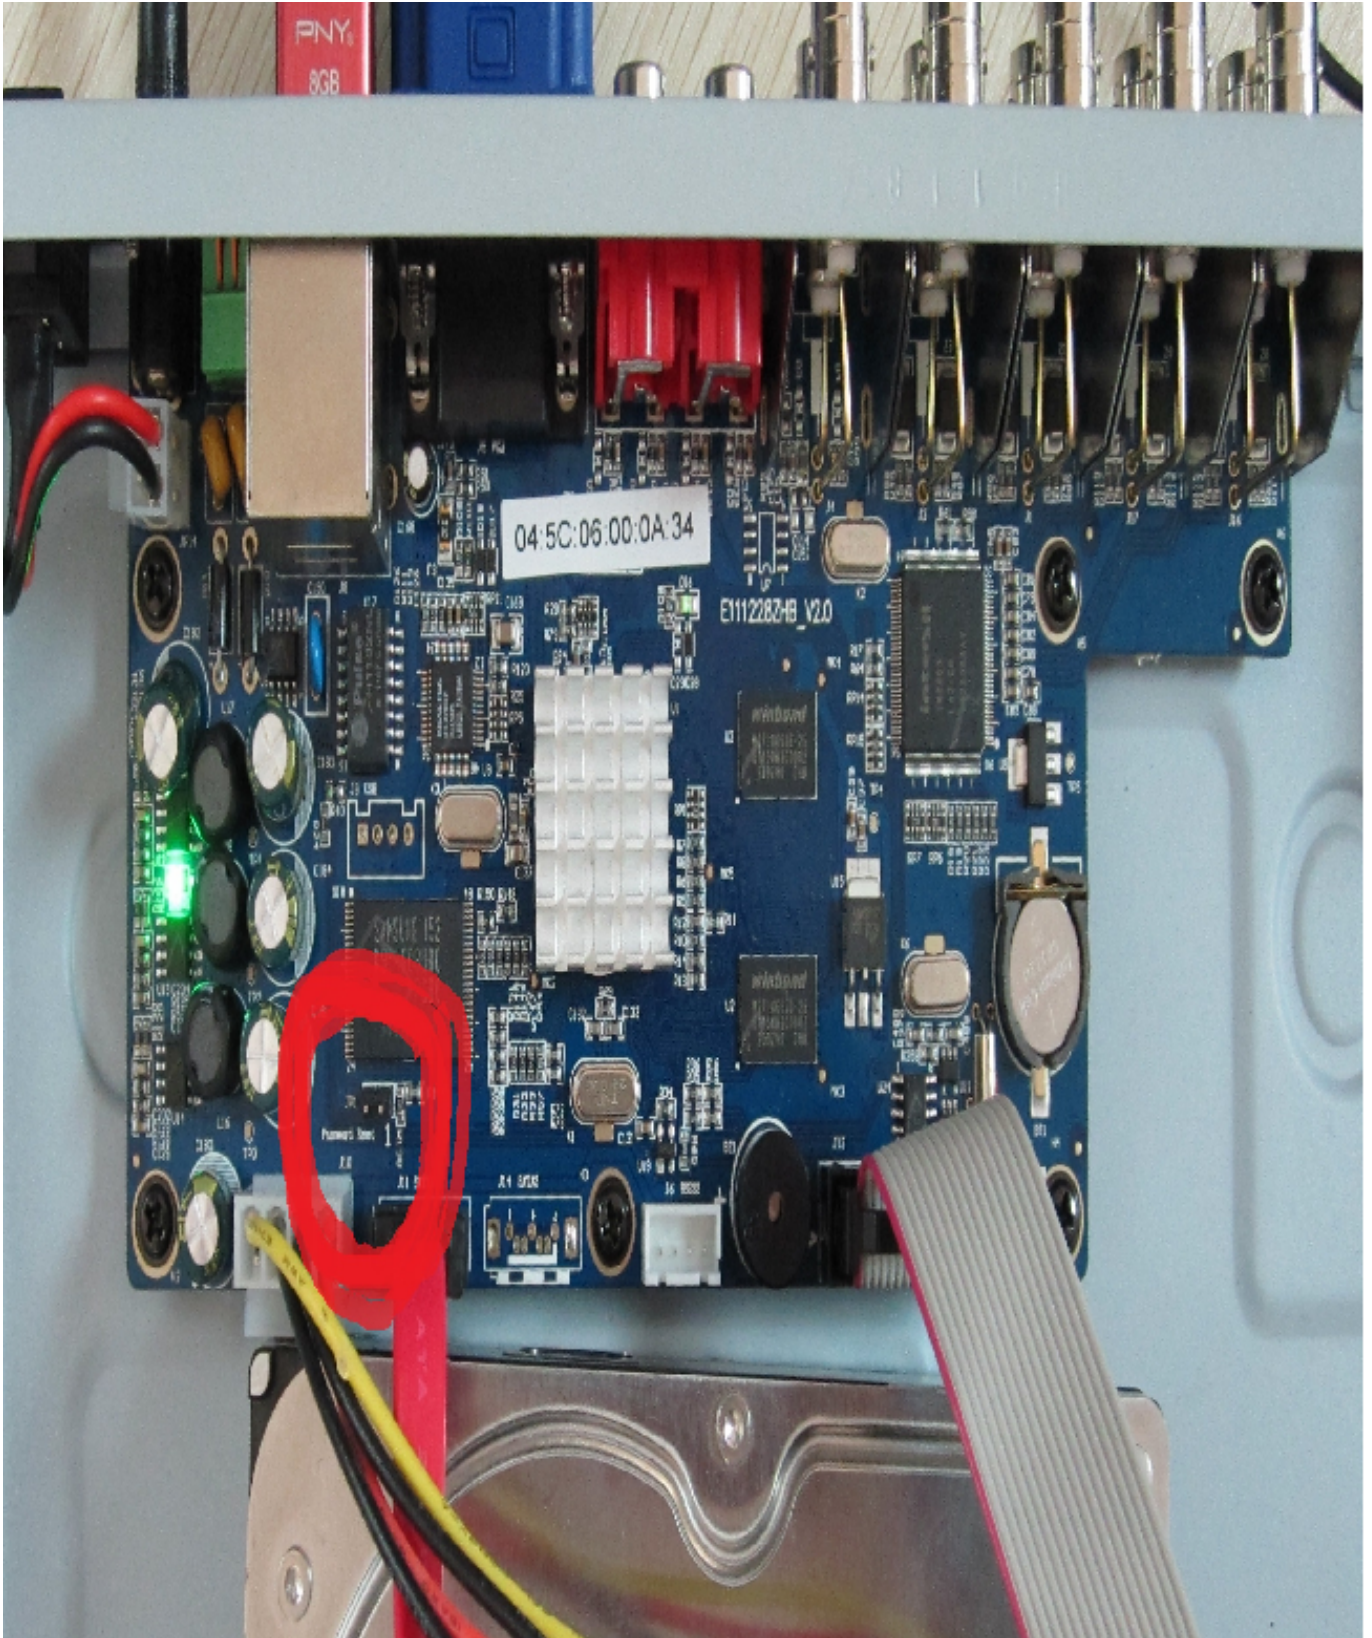

Unique solution ID: #1220
Author: Bryant Irwin
Last update: 2014-09-18 16:21