

ZMD-DR-SFN6

Disable Alarms on DVR-H9124V/8V and SFN6

If your DVR is beeping non stop, follow this guide in order to disable all of the alarms.

Step 1: Right click on the mouse and select 'Main Menu'




Step 2: Select Advanced

ZMD-DR-SFN6



Step 3: Select Alarm

ZMD-DR-SFN6

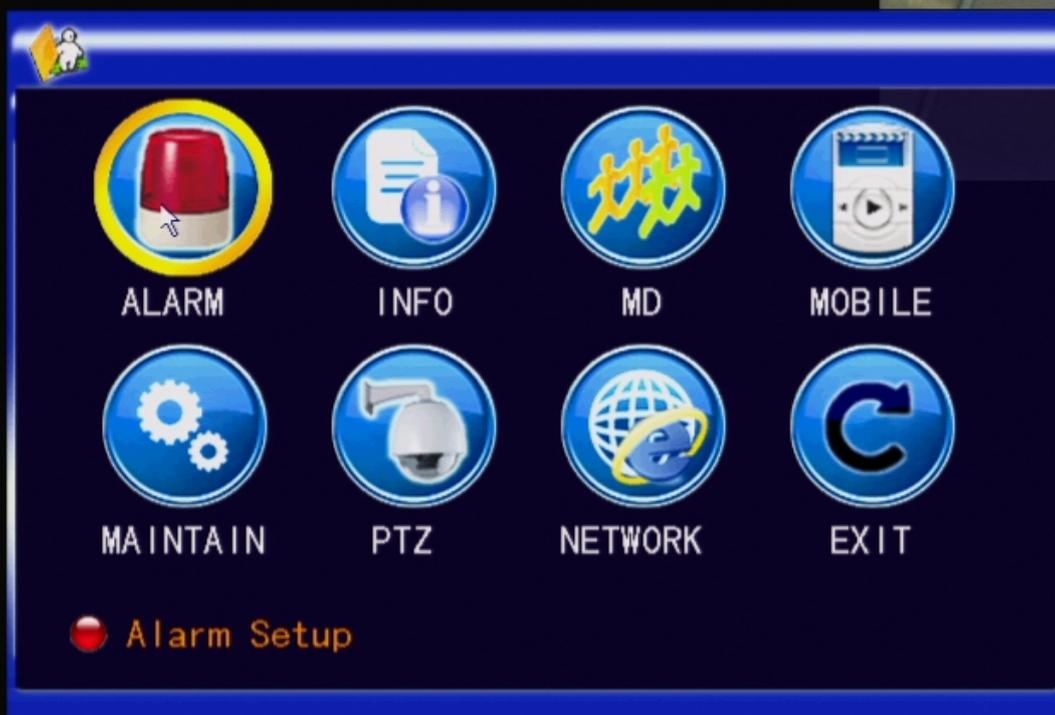


Step 4: Change 'Alarm Manage Output' to 0S and also change 'Buzzer' to 0S

ZMD-DR-SFN6

I/O CHANNEL	CH1	CH2	CH3	CH4
I/O ALARM	NO	NO	NO	NO
HDD LOSS	OFF	HDD SPACE	OFF	OFF
VIDEO LOSS	OFF			
ALARM MANAGE OUTPUT	OS	BUZZER	OS	
	Post Alarm Recording			1MIN
EMAIL SETUP				
Alarm duration time setup				
NEXT PAGE DEFAULT APPLY EXIT				


Step 5: Hit 'Apply' at the bottom of the page

ZMD-DR-SFN6

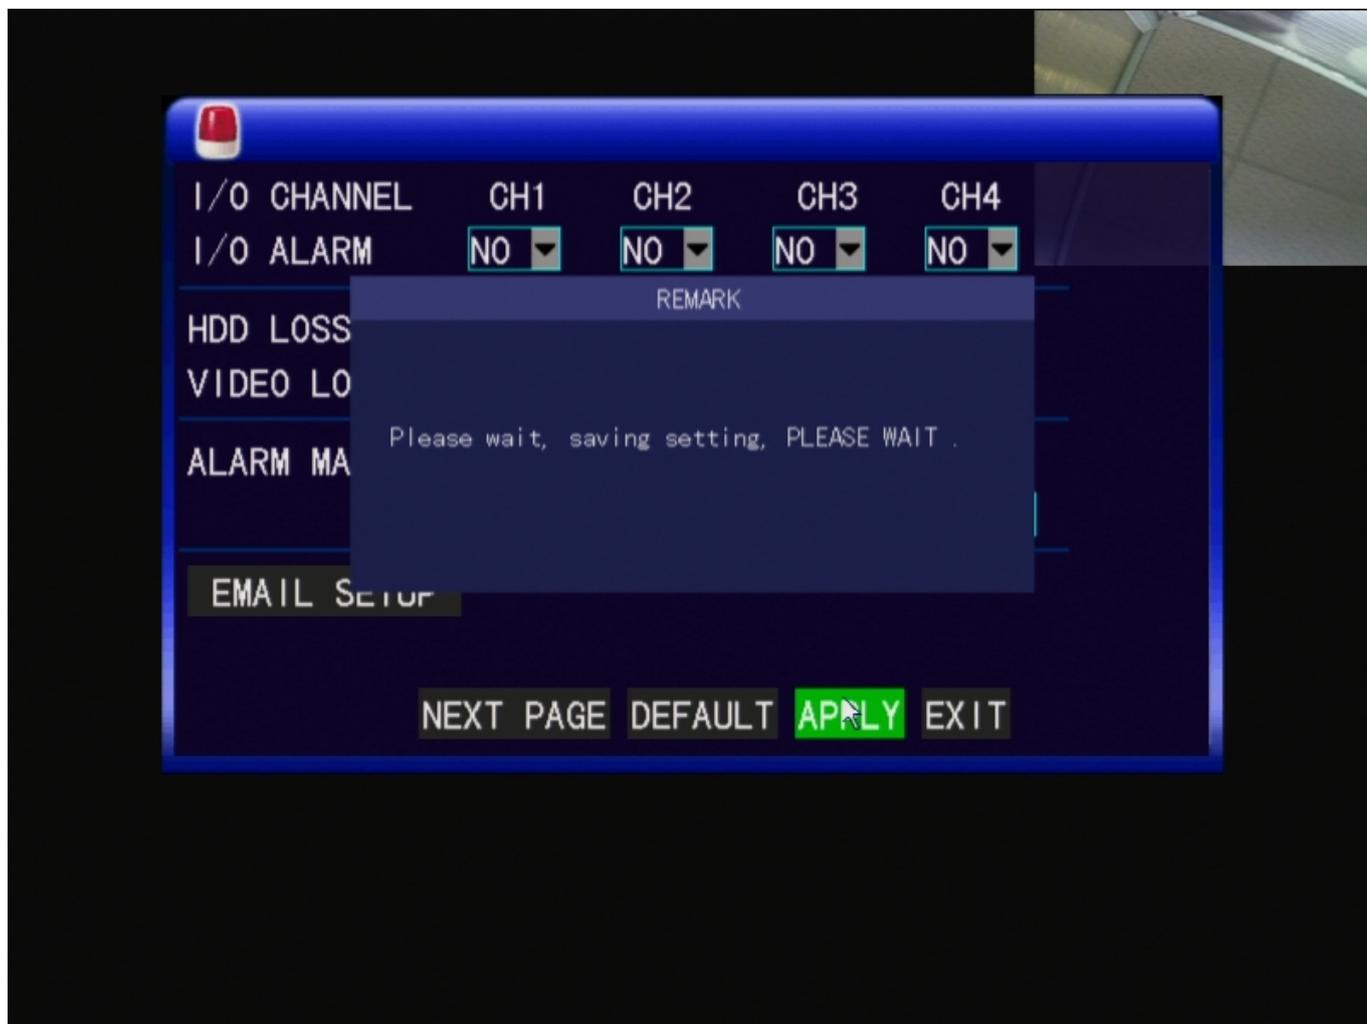

Step 6: Hit 'Ok' when the system says 'Save Successfully'

ZMD-DR-SFN6

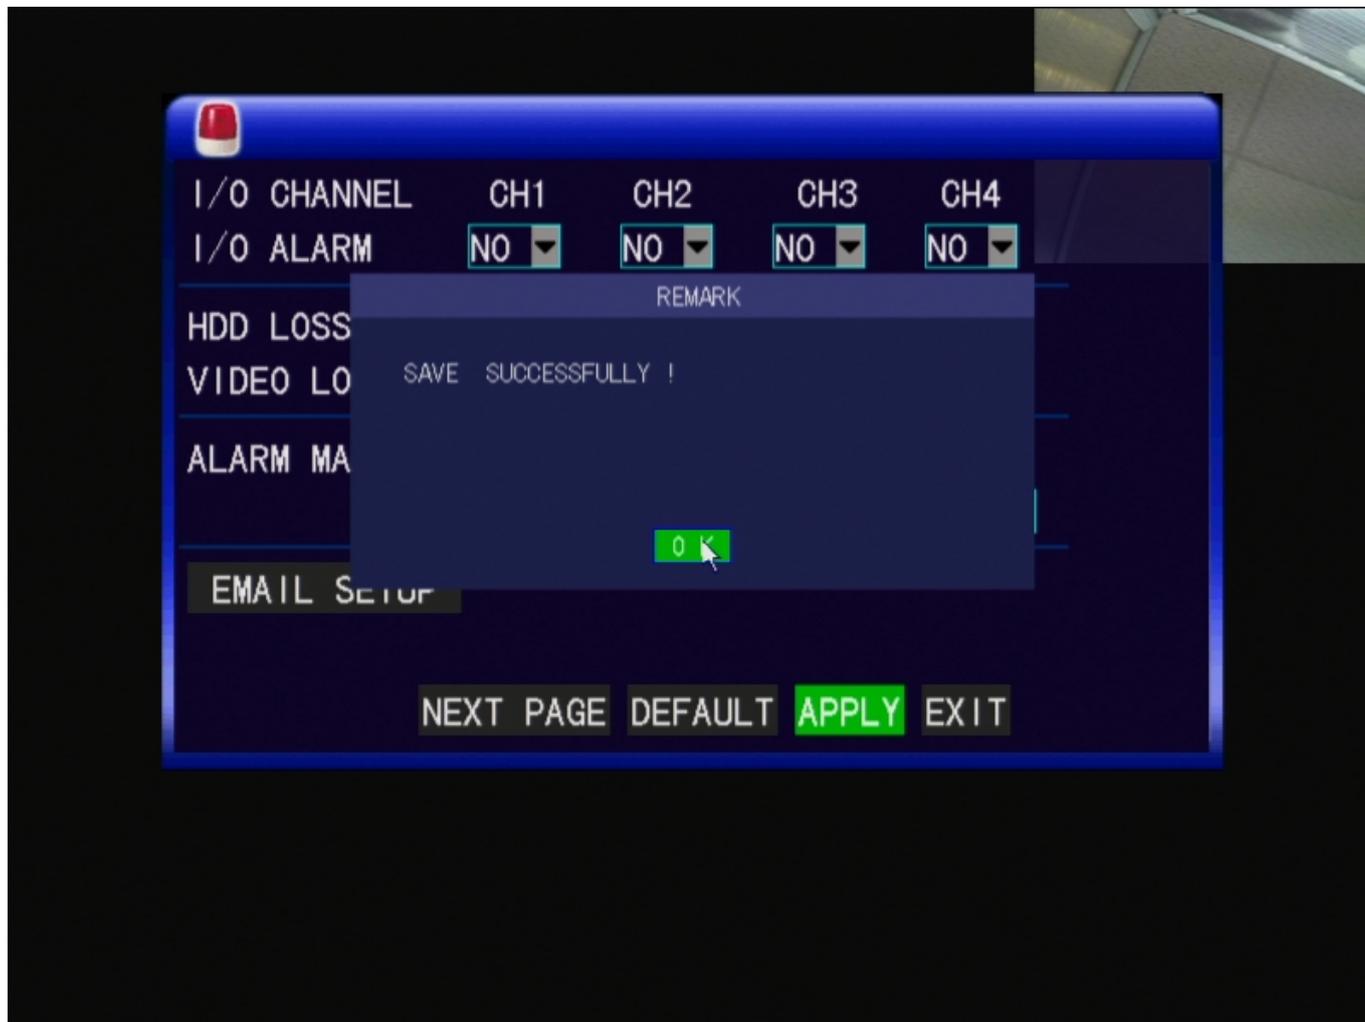

The alarms on the DVR should have stopped beeping now.

Unique solution ID: #1113
Author: Alex Crewell
Last update: 2013-08-17 00:16