


DVR-H9106UVDH

Record on Motion Only - H9104V/8V Purchased 2012 or Later

In order to configure the DVR properly, it is best to set the Alarm and Recording settings to default. This is unavoidable sometimes.


To reload the defaults on the DVR, please follow the next few steps.

Step 1: Go to the Main Menu by Right-Clicking on the mouse and selecting 'Main Menu' at the bottom.

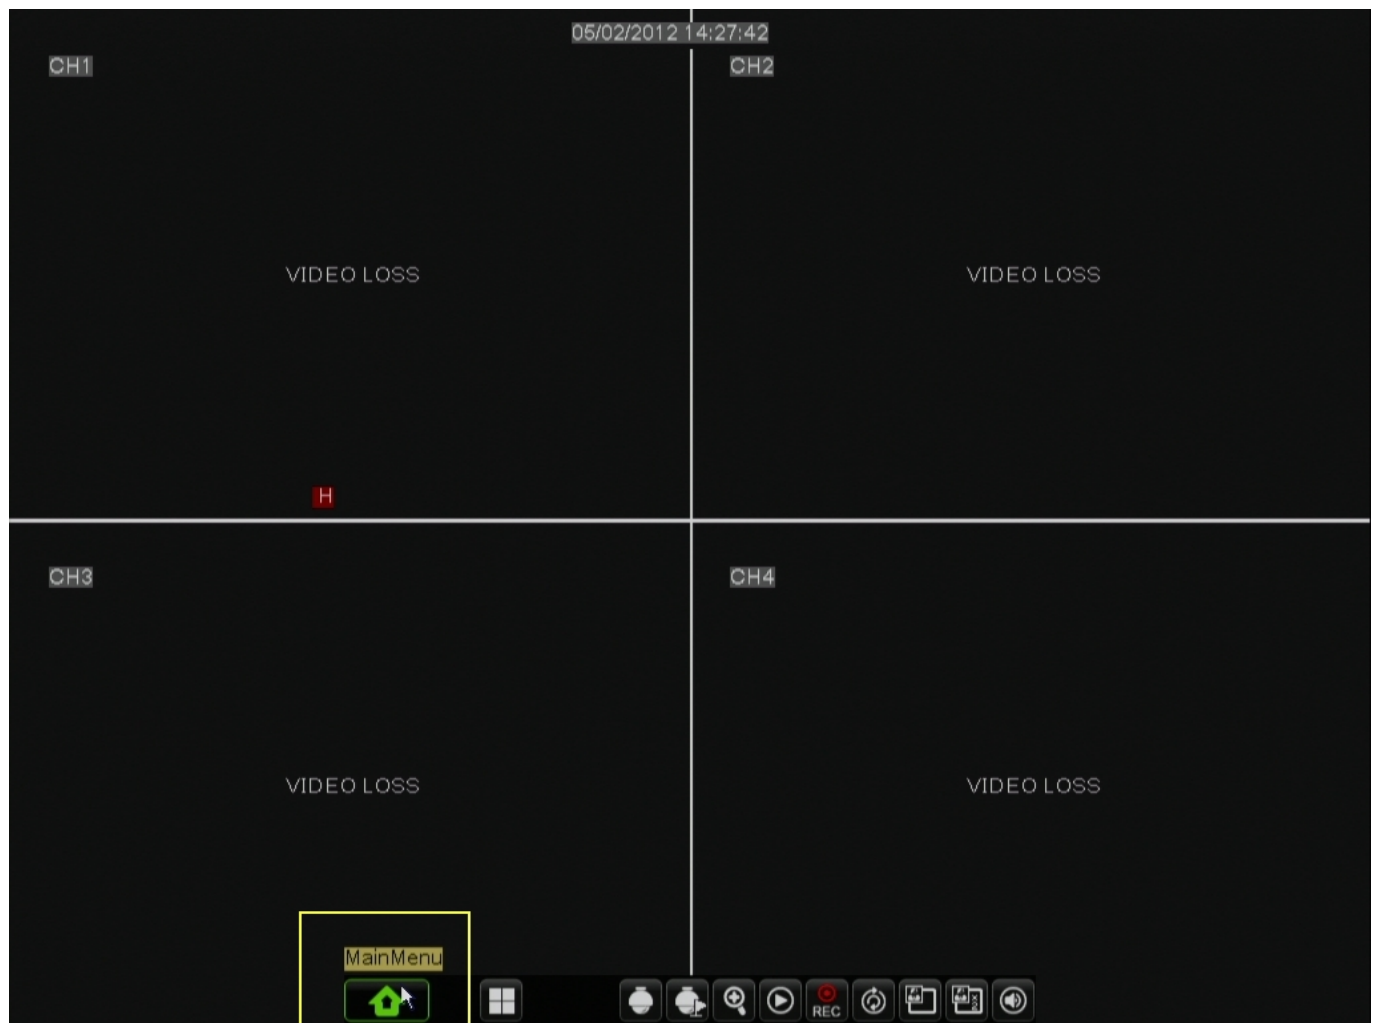

DVR-H9106UVDH

Step 2: Select 'Advanced' from the Main Menu

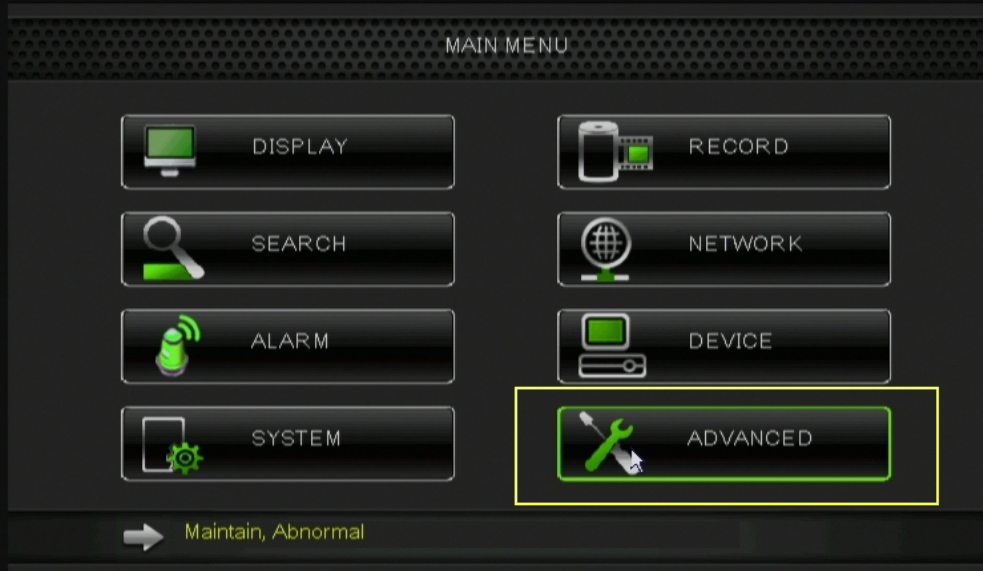

Step 3: Select 'Load Default' from the Main Menu

DVR-H9106UVDH



Step 4: Put a check mark in the boxes labeled 'Record' and 'Alarm'

DVR-H9106UVDH



Step 5: Click 'Apply' in the bottom of the menu and then click 'OK' when the 'Remark' window comes up.

DVR-H9106UVDH



Step 6: Click 'Exit' at the bottom right of the Menu.

DVR-H9106UVDH




Step 7: Select 'Reboot' from the Menu and then select 'OK' when the Warning says "Are you sure to restart machine?"

DVR-H9106UVDH



Step 8: Once the DVR reboots, go back to the Main Menu, but select 'Record' this time.

DVR-H9106UVDH

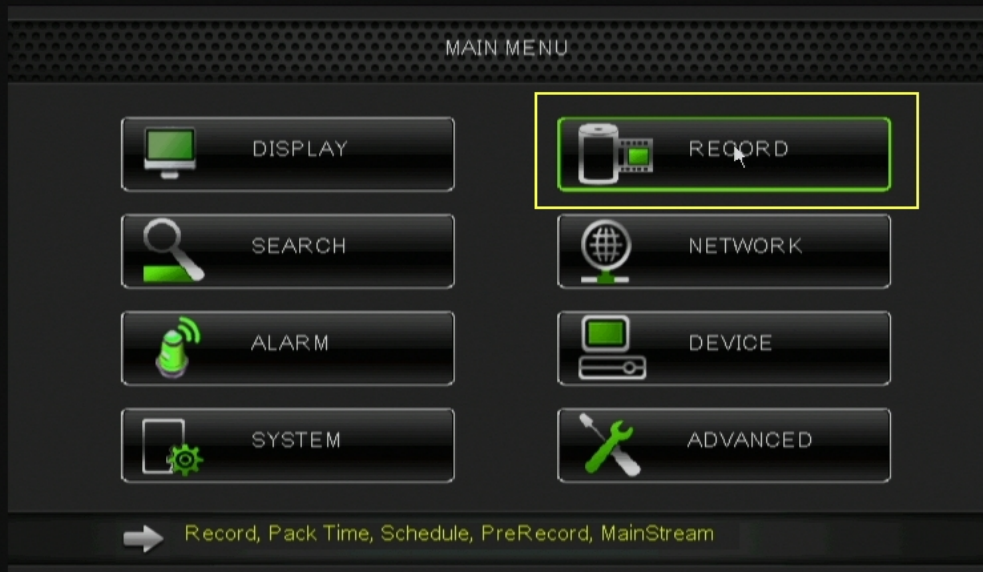

Step 9: Select 'Schedule' from the middle-top of the menu.

DVR-H9106UVDH



Step 10: Click on all of the green boxes to make the boxes empty and then click all the boxes in the bottom row and make them yellow.

DVR-H9106UVDH



Step 11: Click on both of the 'Copy' buttons on the screen and then hit 'Apply'

DVR-H9106UVDH



Step 12: Exit out of every menu. You should now see the letter 'M' in the cameras that are detecting motion.

Unique solution ID: #1111
Author: Alex Crewell
Last update: 2013-08-16 23:42