

# ZP-NE14-S (sPoE)

## P2P Systems - Default Username and Password

The default username and password for this system is as follows:

USER: **admin**

Pass: **111111** (six number 1's)

If you have changed and forgotten the password, there is a reset button on the back of the system. This will restore ALL settings to factory defaults, including the username and password.

Unique solution ID: #1298

Author: Bryant Irwin

Last update: 2015-03-30 12:02