

Analog Cameras

Installation Guide for the NE-PSE104 4 Port POE Injector



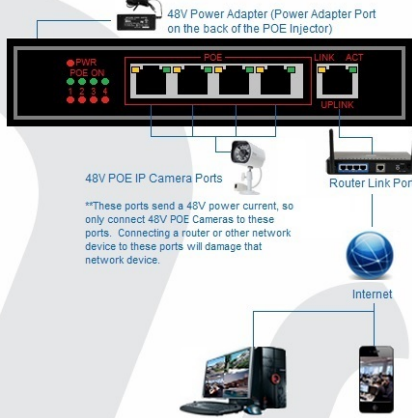

User Guide

4 PORT 48V POE INJECTOR

The intended use of this product is to supply power and video stream connection to Power Over Ethernet (POE) IP Cameras so that your POE IP Cameras may connect either to an NVR or to an internet connection for remote viewing.

****This product is compatible with Zmodo brand 48V POE IP Cameras and also non-Zmodo brand 48V POE IP Cameras.**

Standard Operation: Connect POE IP Cameras to a Router




Need some help?

Check out our online resources and installation tips at kb.zmodo.com. We're also on YouTube! Check out our "Zmodo Tech Support" official YouTube channel.

Supported Zmodo POE IP Camera Models that are compatible with this 48V POE Injector:

ZP-IBG11-P	ZP-IDR13-PA
ZP-IBG14-P	ZP-IBH13-P
ZP-IPD15-P	**List may not include all compatible models. All 48V POE IP Cameras supported.

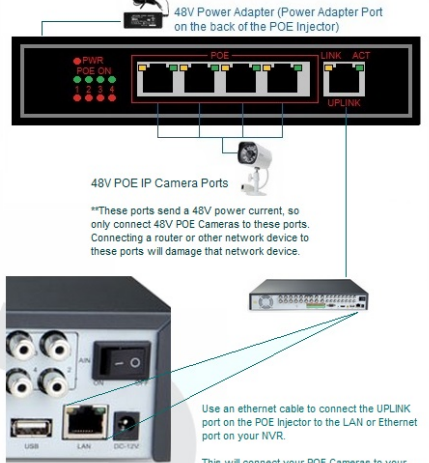Standalone Operation: Connecting POE Cameras to Your NVR Without a Router or Internet Connection



Use an ethernet cable to connect the UPLINK port on the POE Injector to the LAN or Ethernet port on your NVR.

This will connect your POE Cameras to your NVR without the use of a router. This method of connection is only ideal if you are using your POE injector at a location where there is no internet connection.

Unique solution ID: #1379
Author: Amanda Mayer
Last update: 2015-10-06 16:16