

Networking

NVR Dynamic DNS Setup and Usage

Zmodo Dynamic DNS Setup and Usage

Zmodo is proud to introduce our new dynamic DNS service, which will allow our customers to automatically update their public IP addresses with our server and connect remotely to their devices through a friendly, easy to use interface. Getting everything set up is straightforward and should only take a few minutes.

Step 1. Sign up for an account at zmododns.com

**DDNS**

Sign In Sign Out **New User?**

Welcome to Zmodo Dynamic DNS

To use our DDNS system all you need to do is create an account here, enter your login information into your ZMOD0 NVR with an internet connection and check the web site for a link straight to your NVR!

NEW FEATURE!

Download the new ZMODODNS standalone application for Windows! You can now update your external IP address automatically from your Windows PC! Un-zip the folder anywhere and click on "Zmododns.exe". Login to your Zmodo DNS account from there.

DOWNLOAD Application

Zmodo DNS server updates your domain name automatically

xxxx.zmododns.com

Login to your Zmodo DNS account on your NVR or through a Windows PC


Check your NVR from any Internet Explorer Browser

Purchase Zmodo products here!



Choose your desired username and password at our site. You will be informed if an existing user already exists, or if your email is already registered (limit 1 account per email).

Networking

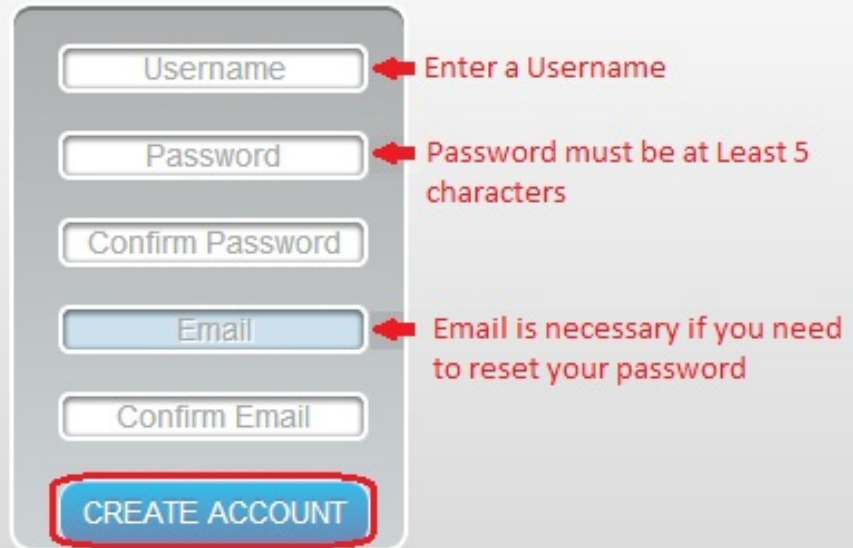The image shows a form for creating an account. It has five input fields: 'Username', 'Password', 'Confirm Password', 'Email', and 'Confirm Email'. Below these fields is a blue button labeled 'CREATE ACCOUNT'. To the right of the form, there are three red arrows pointing to the 'Username', 'Password', and 'Email' fields, each with a red text annotation. The 'CREATE ACCOUNT' button is highlighted with a red border. The annotations are: 'Enter a Username' for the Username field, 'Password must be at Least 5 characters' for the Password field, and 'Email is necessary if you need to reset your password' for the Email field.

Step 2. Create domain name(s) for use with your device(s)

Once signed in, you will need to add a domain. This will be the address used to access your device. Each account can request up to 5 domains for use with multiple devices at different IP addresses.

Networking



[Sign In](#) [Sign Out](#) [New User?](#)

Hi, Demo

These are your registered domain names with their current IP.(Max 5)

Unassigned D	Unassigned D	Unassigned D	Unassigned D	Unassigned D

ADD DOMAIN

DELETE DOMAIN

New Zmodo DNS Functionality!

You may now type in your Zmododns name into any browser from any PC and access your Zmodo product!

newuser.zmododns.com

Enter the desired domain name into the blank and hit submit. If the name is available, the user will be informed of a successful domain creation. Otherwise, the user will need to choose a different name.

Networking



Step 3. Configure the NVR to use zmododns.

*The NVR must be actively connected to the internet prior to setting up dynamic DNS

Networking


- a. In the NVR, navigate to "Configure system settings", then "Configure network settings", then click on the "DDNSSettings".
- b. Choose "zmododns" from the server drop down menu.
- c. Enter the newly registered user name into the "Account" field and the password into the "password" field.
- d. Enter the full registered domain name into the domain field (for this example, it would be mydvr.zmododns.com).
- e. Be sure the "On" button is checked on the top left.
- f. Click "Save" to save the settings.

Step 4. Access device via domain name or zmododns.com

The user may access his/her device directly via the domain registered (i.e. <http://zmodoexample.zmododns.com>)

Zmododns.com will also have the latest updated public IP address for each of the domains on the user's account. The log in interface is easy and intuitive, and will remember the user's session (no need to log in again on subsequent visits). Once logged in, the user will be presented with links to his/her domains.

Networking

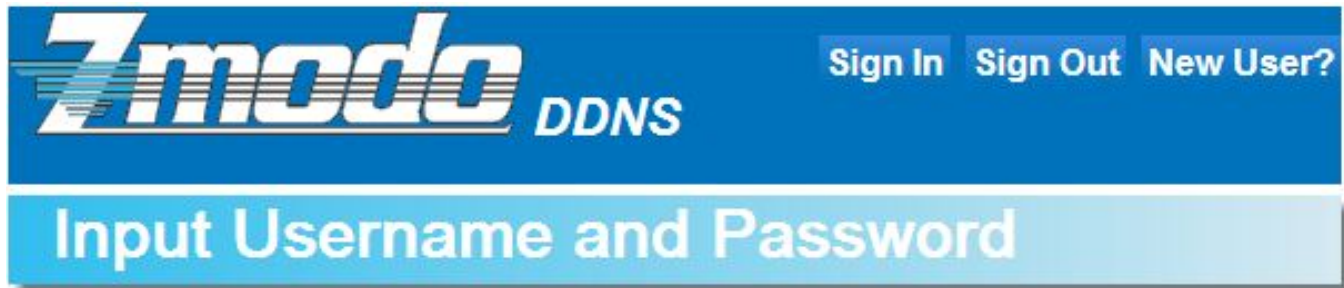

The image shows the login page for Zmodo DDNS. At the top, there is a blue header bar. On the left side of the header is the Zmodo logo, which consists of the word 'Zmodo' in a stylized white font with blue horizontal lines, followed by 'DDNS' in a smaller white font. On the right side of the header are three links: 'Sign In', 'Sign Out', and 'New User?'. Below the header is a light blue banner with the text 'Input Username and Password'. The main content area is a light gray rectangle. In the center of this area is a rounded gray box containing the login form. The form has two text input fields, one for 'Username' and one for 'Password', both with placeholder text. Below these fields is a blue 'LOGIN' button. At the bottom of the gray box is a link that says 'Forgot your password?'.

Unique solution ID: #1092
Author: Alex Crewell
Last update: 2014-04-11 10:16