

DVR-H9128V

Disable Alarms on DVR-H9124V/8V and SFN6

If your DVR is beeping non stop, follow this guide in order to disable all of the alarms.

Step 1: Right click on the mouse and select 'Main Menu'



Step 2: Select Advanced

DVR-H9128V




Step 3: Select Alarm

DVR-H9128V



Step 4: Change 'Alarm Manage Output' to 05 and also change 'Buzzer' to 05

DVR-H9128V

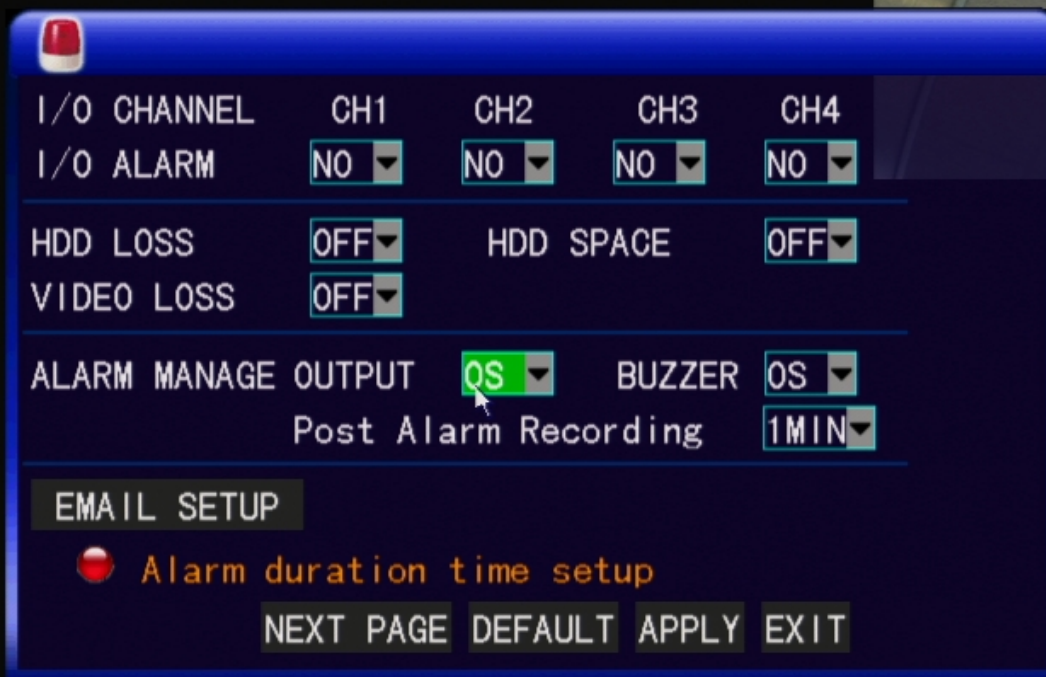


The screenshot shows a blue-themed menu for the DVR-H9128V. At the top left is a red alarm bell icon. The menu is organized into several sections:

- I/O CHANNEL**: CH1, CH2, CH3, CH4
- I/O ALARM**: NO (dropdown) for each channel.
- HDD LOSS**: OFF (dropdown)
- HDD SPACE**: OFF (dropdown)
- VIDEO LOSS**: OFF (dropdown)
- ALARM MANAGE OUTPUT**: OS (dropdown)
- BUZZER**: OS (dropdown)
- Post Alarm Recording**: 1MIN (dropdown)

Below these settings is a section titled **EMAIL SETUP**. Underneath, there is a red alarm bell icon followed by the text **Alarm duration time setup**. At the bottom of the menu are four buttons: **NEXT PAGE**, **DEFAULT**, **APPLY**, and **EXIT**.


Step 5: Hit 'Apply' at the bottom of the page

DVR-H9128V

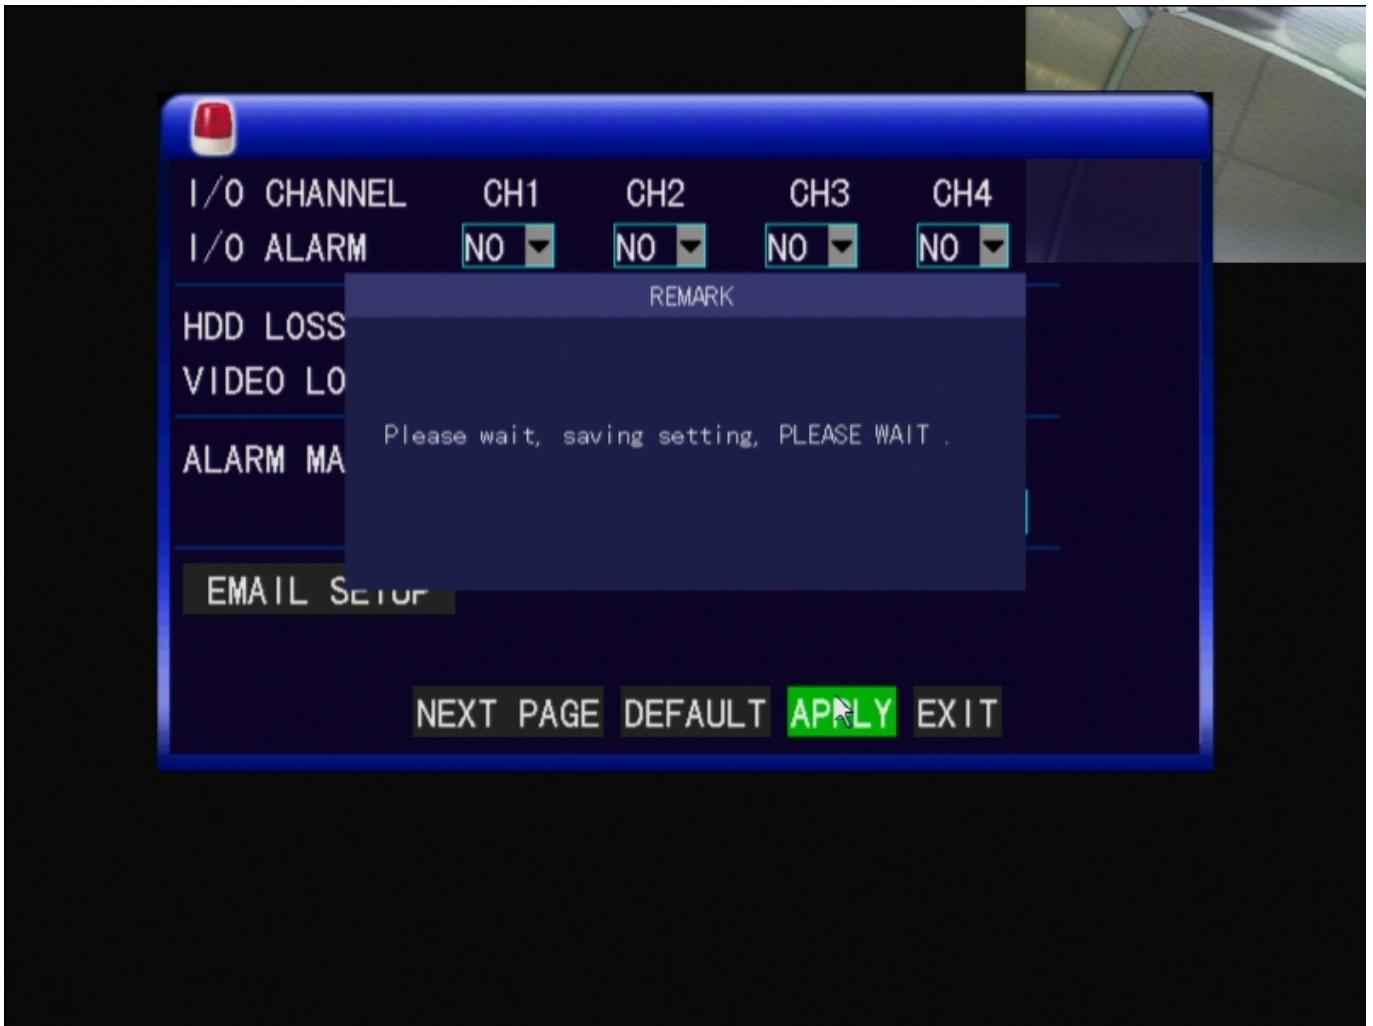

Step 6: Hit 'Ok' when the system says 'Save Successfully'

DVR-H9128V

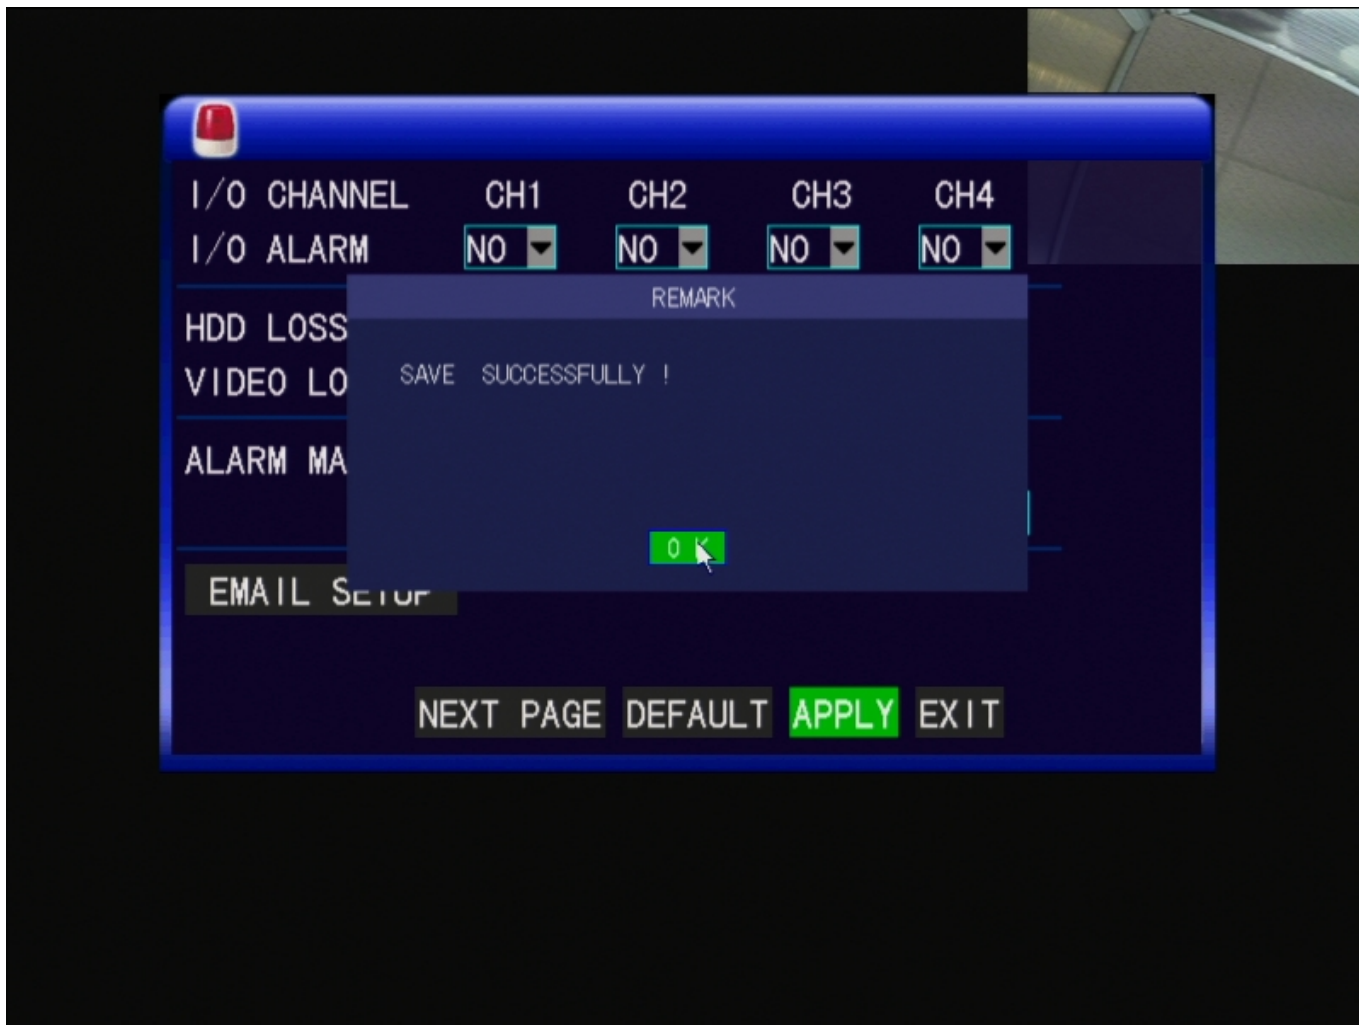

The alarms on the DVR should have stopped beeping now.

Unique solution ID: #1113
Author: Alex Crewell
Last update: 2013-08-17 00:16