


# ZMD-DR-SFN6

## How to Backup and Convert Video Files for a DR-SFN6, H9124, or H9128

1. Enter the "Video Search" screen from SUB MENU →VIDEO SEARCH or MAIN MENU→PLAYBACK as shown below:

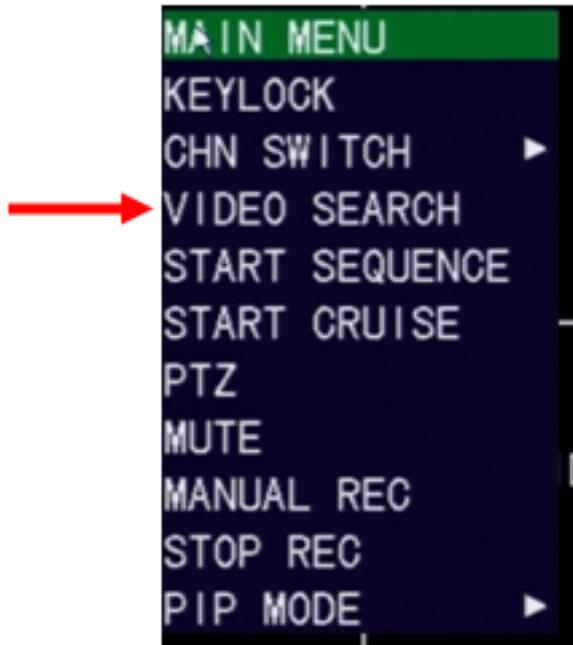

# ZMD-DR-SFN6



2. Enter date to be searched in the date box or select the day from the calendar box. Then click SEARCH to load recorded videos in the calendar.

A green block indicates normal recording, a red block indicates alarm recording, and the background color indicates no recordings are on that day.

In this example Jun. 12 is selected and a normal recording is found for 10:30 pm.

3. Click "File List" button to enter the backup menu box.

# ZMD-DR-SFN6



4. In the “Detailed File List” screen select a recorded file. A check mark will appear in this box, indicating that this record file has been selected.

5. Insert a USB storage device and click BACKUP. A pop-up notification will show the progress of the file backup.

6. To view your files using a standard media player, you will need to convert the file you backed up to a USB drive from the h.264 format to .avi format. For the conversion, you will need to download a program called NetDVR onto your computer.

<http://files.zmodo.com/Software%20Files/PC%20Viewing%20Software/DVRs/NetDvr.msi>

7. You will need to run NetDvr and click Offline

# ZMD-DR-SFN6

**USER LOGIN**

IP ADDRESS:

MEDIA PORT: 9000

PASSWORD:

NETWORK: INTERNET

LANGUAGE: English

LOGIN RESET OFFLINE

8. Click on the H.264 to AVI button

11

h264toavi

8

H.264 AVI

9. Browse to your source file

10. Select your Destination file path

# ZMD-DR-SFN6

**11.** Click h264toavi button in the box which shows your SrcFile and DestFile.

Unique solution ID: #1305

Author: Amanda Mayer

Last update: 2014-05-29 11:06