



5. After clicking OK, the camera will tell you "change is saved".

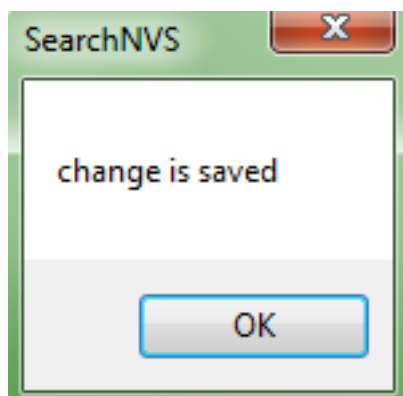

6. Wait for 1 minute then hit "Search". Highlight the camera, and click "Modify Settings" again.

7. Uncheck "Enable DHCP" and find the IP Address. Add 50 to the last number in the set. For example, if your IP says 192.168.1.23, change it to 192.168.1.73. Type the username "admin" in and click "OK".

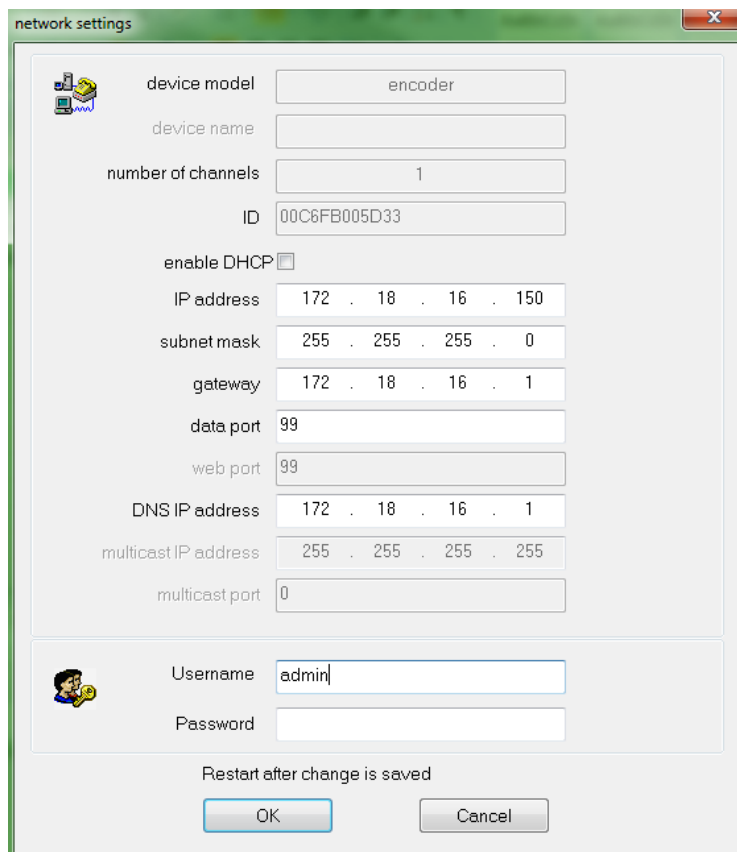

8. Wait for approximately 1 minute, and click "Search" again.
9. Highlight the camera in the search tool and choose "Open Device". This will open the camera in Internet Explorer.
10. Type in the username "admin" and click "OK" to login. There is no password by default.




11. Click "Sign in" under "ActiveX Mode (For IE Browser)"



12. Internet Explorer will now install the add-on. Accept or allow any prompts to install software at this point. If it doesn't work, you may need to configure your ActiveX controls as explained: [HERE](#)

13. Click the "Settings" icon in the bottom right of the page.

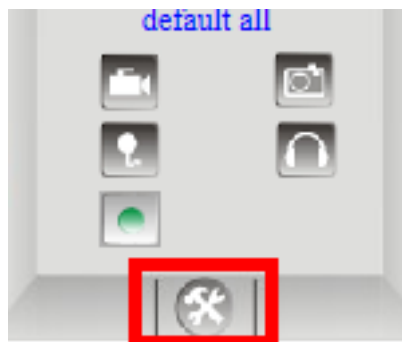

14. In the column on the right hand side, choose "Wireless Lan Settings"

Device Info
Alias Settings
Date&Time Settings
Users Settings
Multi-Device Settings
Basic Network Settings
Wireless Lan Settings
ADSL Settings
UPnP Settings
DDNS Service Settings
Mail Service Settings
Ftp Service Settings
Alarm Service Settings
PTZ Settings
Decoder Settings
Upgrade Device Firmware
Backup & Restore Settings
Restore Factory Settings
Reboot Device
Log
Back

- Click the "Scan" button 2-3 times. Your wireless network should show up in the list.

Wireless Lan Settings	
Wireless Network List	<div style="border: 1px solid black; padding: 5px;"> <p>TestWiFi[4e00b8a38650] infra WPA/WPA2-PSK CallCenter[000050465d6c] infra WPA/WPA2-PSK</p> </div>
	<input type="button" value="Scan"/>
Using Wireless Lan	<input checked="" type="checkbox"/>
SSID	<input type="text" value="TestWiFi"/>
Network Type	<input type="text" value="Infra"/>
Encryption	<input type="text" value="WPA2 Personal (TKIP)"/>
Share Key	<input type="text" value="testingcam"/>
	<input type="button" value="Submit"/> <input type="button" value="Refresh"/>

- Type your WiFi password in the "Share Key" field and then click submit. The screen will change and start a 30 second countdown. Remove the ethernet cable with 20-25 seconds left.

The device is rebooting. Don't shutdown it's power. Please waiting ... 28

17. After the countdown is complete, wait another 10-15 seconds and hit Search in the tool again. If the camera is detected, your camera is now on wireless and you can put the camera where you would like.

18. To set up recording, we recommend using the software ISPY and it can be located: [HERE](#)

Unique solution ID: #1287

Author: Bryant Irwin

Last update: 2014-01-13 16:39