


# CM-I12316GY

## CM-I11123BK / CM-I12316GY - Wifi Setup Guide

The CM-I11123BK and the CM-I12316GY share the same software and the same setup instructions. Before starting the setup, please make sure that your camera powered on and plugged into your router with the included ethernet cable.

1. Install the search tool from the included software disc. If you do not have the software disc, you can download it from: [HERE](#)
2. Open the search tool and click "Search". It should find the camera at it's default IP of 192.168.1.99

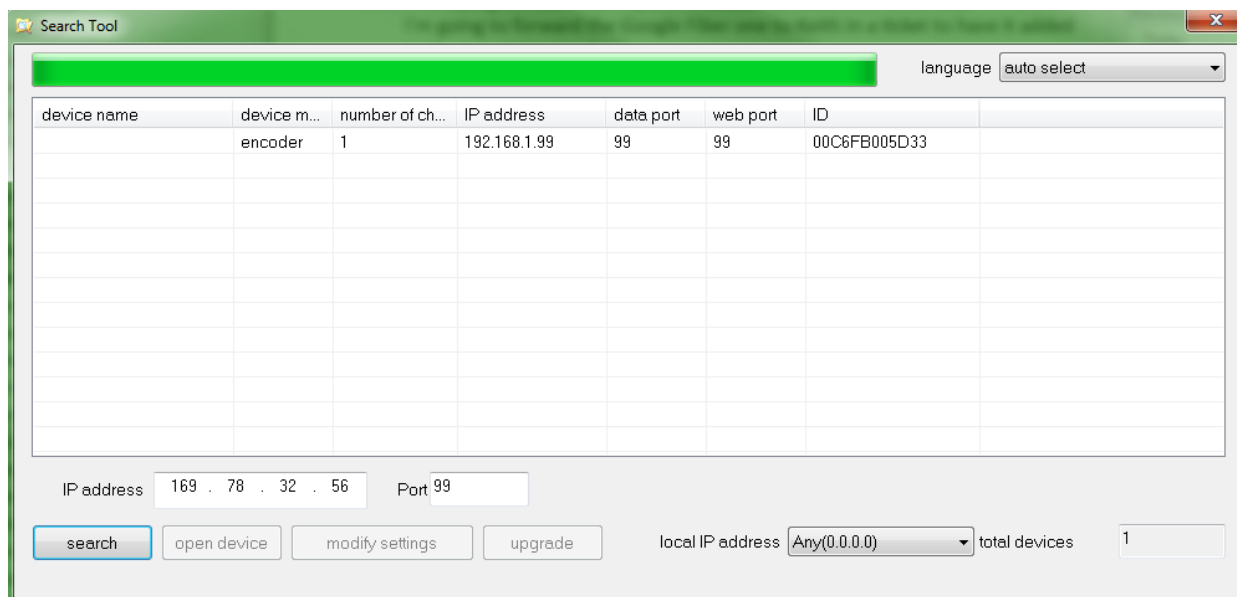

3. Highlight the camera in the search tool and click "Modify Settings".
4. Put a check next to "Enable DHCP", type "admin" into the box next to username, and then click "OK".

# CM-I12316GY


The 'network settings' window displays the following configuration:

- device model: encoder
- device name: (empty)
- number of channels: 1
- ID: 00C6FB005D33
- enable DHCP:
- IP address: 192 . 168 . 1 . 99
- subnet mask: 255 . 255 . 255 . 0
- gateway: 192 . 168 . 1 . 1
- data port: 99
- web port: 99
- DNS IP address: 172 . 18 . 16 . 1
- multicast IP address: 255 . 255 . 255 . 255
- multicast port: 0
- Username: admin
- Password: (empty)

Restart after change is saved

Buttons: OK, Cancel


5. After clicking OK, the camera will tell you "change is saved".

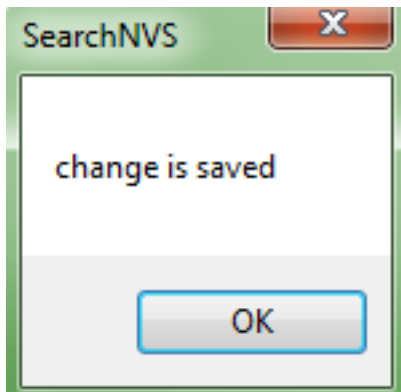

6. Wait for 1 minute then hit "Search". Highlight the camera, and click "Modify Settings" again.

7. Uncheck "Enable DHCP" and find the IP Address. Add 50 to the last number in the set. For example, if your IP says 192.168.1.23, change it to 192.168.1.73. Type the username "admin" in and click "OK".

# CM-I12316GY

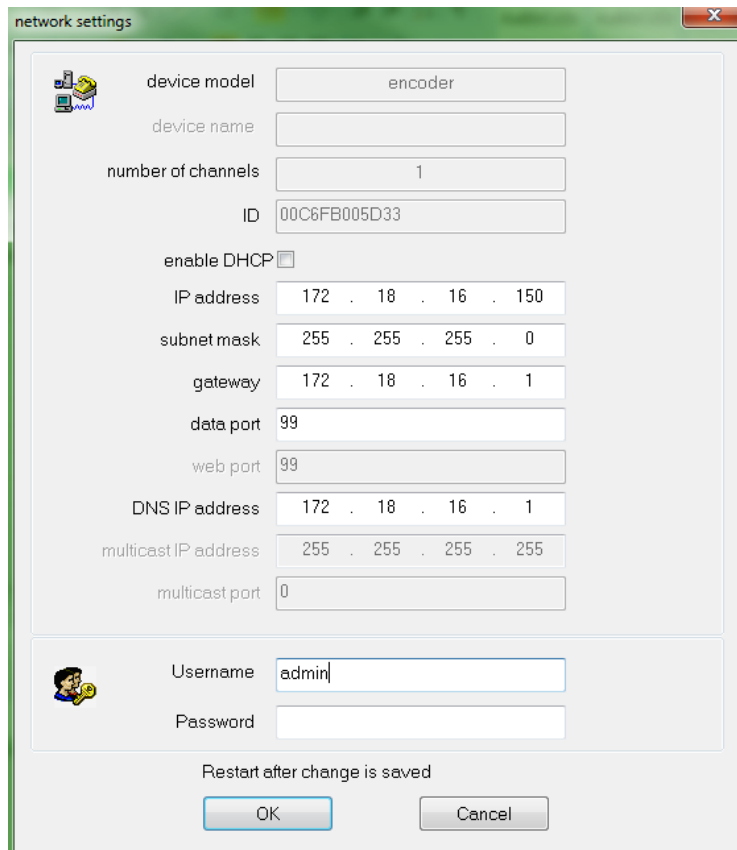

The 'network settings' dialog box contains the following fields and options:

- device model: encoder
- device name: [empty]
- number of channels: 1
- ID: 00C6FB005D33
- enable DHCP:
- IP address: 172 . 18 . 16 . 150
- subnet mask: 255 . 255 . 255 . 0
- gateway: 172 . 18 . 16 . 1
- data port: 99
- web port: 99
- DNS IP address: 172 . 18 . 16 . 1
- mcast IP address: 255 . 255 . 255 . 255
- mcast port: 0
- Username: admin
- Password: [empty]

Restart after change is saved

Buttons: OK, Cancel

- Wait for approximately 1 minute, and click "Search" again.
- Highlight the camera in the search tool and choose "Open Device". This will open the camera in Internet Explorer.
- Type in the username "admin" and click "OK" to login. There is no password by default.



The Windows Security dialog box displays the following information:

The server 172.18.16.150 is asking for your user name and password. The server reports that it is from ipcamera\_00C6FB005D33.

Warning: Your user name and password will be sent using basic authentication on a connection that isn't secure.

Fields and options:

- User name: [empty]
- Password: [empty]
- Remember my credentials:

Buttons: OK, Cancel


# CM-I12316GY

11. Click "Sign in" under "ActiveX Mode (For IE Browser)"



12. Internet Explorer will now install the add-on. Accept or allow any prompts to install software at this point. If it doesn't work, you may need to configure your ActiveX controls as explained: [HERE](#)

13. Click the "Settings" icon in the bottom right of the page.

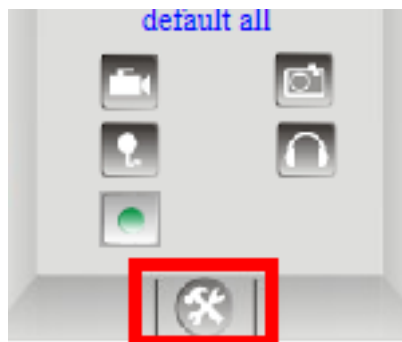

14. In the column on the right hand side, choose "Wireless Lan Settings"

# CM-I12316GY

<a href="#">Device Info</a>
<a href="#">Alias Settings</a>
<a href="#">Date&amp;Time Settings</a>
<a href="#">Users Settings</a>
<a href="#">Multi-Device Settings</a>
<a href="#">Basic Network Settings</a>
<a href="#">Wireless Lan Settings</a>
<a href="#">ADSL Settings</a>
<a href="#">UPnP Settings</a>
<a href="#">DDNS Service Settings</a>
<a href="#">Mail Service Settings</a>
<a href="#">Ftp Service Settings</a>
<a href="#">Alarm Service Settings</a>
<a href="#">PTZ Settings</a>
<a href="#">Decoder Settings</a>
<a href="#">Upgrade Device Firmware</a>
<a href="#">Backup &amp; Restore Settings</a>
<a href="#">Restore Factory Settings</a>
<a href="#">Reboot Device</a>
<a href="#">Log</a>
<a href="#">Back</a>

- Click the "Scan" button 2-3 times. Your wireless network should show up in the list.

Wireless Lan Settings			
Wireless Network List	<table border="1"><tr><td>TestWiFi[4e00b8a38650] infra WPA/WPA2-PSK</td></tr><tr><td>CallCenter[000050465d6c] infra WPA/WPA2-PSK</td></tr></table>	TestWiFi[4e00b8a38650] infra WPA/WPA2-PSK	CallCenter[000050465d6c] infra WPA/WPA2-PSK
TestWiFi[4e00b8a38650] infra WPA/WPA2-PSK			
CallCenter[000050465d6c] infra WPA/WPA2-PSK			
	<input type="button" value="Scan"/>		
Using Wireless Lan	<input checked="" type="checkbox"/>		
SSID	<input type="text" value="TestWiFi"/>		
Network Type	<input type="text" value="Infra"/>		
Encryption	<input type="text" value="WPA2 Personal (TKIP)"/>		
Share Key	<input type="text" value="testingcam"/>		
	<input type="button" value="Submit"/> <input type="button" value="Refresh"/>		

- Type your WiFi password in the "Share Key" field and then click submit. The screen will change and start a 30 second countdown. Remove the ethernet cable with 20-25 seconds left.

The device is rebooting. Don't shutdown it's power. Please waiting ... 28

## CM-I12316GY

17. After the countdown is complete, wait another 10-15 seconds and hit Search in the tool again. If the camera is detected, your camera is now on wireless and you can put the camera where you would like.

18. To set up recording, we recommend using the software ISPY and it can be located: [HERE](#)

Unique solution ID: #1287

Author: Bryant Irwin

Last update: 2014-01-13 16:39