

Manuals

Local Network Setup

Automatically Assign an IP address in to the DVR

All Zmodo DVR's have the capability of automatically assigning an IP address as long as the unit is connected to a router with an ethernet cord.

1) To auto assign an IP address in your DVR, access the **Main Menu** and go in to the **Network Settings**.

Select **DHCP** (auto assign IP) and select **Apply**. Restart the system after the setting has been saved.

Examples:

H9104V, H9108V, H9116UVDH

Manuals

NETWORK

Display

Record

Search

Network

Alarm

Device

System

Advanced

Network

SubStream

DDNS

Email

Mobile

Type	DHCP
Client Port	09000
HTTP Port	00080
UPNP	Disable


Default

Apply

Exit

H9114V, H9118V

Manuals



System Record Video **Net** Alarm Maintenance Save

NETWORK DHCP

IP ADDRESS 172 . 16 . 4 . 245

SUBNET MASK 255 . 255 . 255 . 0

GATEWAY 172 . 16 . 4 . 1

HTTP PORT 80

COMMAND PORT 5050

MEDIA PORT 6050

Next page >

Set the gain way of network address.
It will take effect after being saved.

H8114V, H8118UV

Manuals

NETWORK SETUP

AUTO ASSIGN IP (DHCP)

ENABLE UPNP

ETHERNET IP

0 . 0 . 0 . 0

NETMASK

0 . 0 . 0 . 0

MAC

GATEWAY

0 . 0 . 0 . 0

EMAIL

DNS

0 . 0 . 0 . 0

SERVER PORT

7777

HTTP PORT

80

DDNS SERVER

NOT USED

MOBILE PORT

8888

DOMAIN NAME

ACCOUNT

PASSWORD

PPPOE AUTO STARTUP

PPPOE IP

0 . 0 . 0 . 0

DIAL UP

ACCOUNT


PASSWORD

SAVE

EXIT

H9124V

Manuals

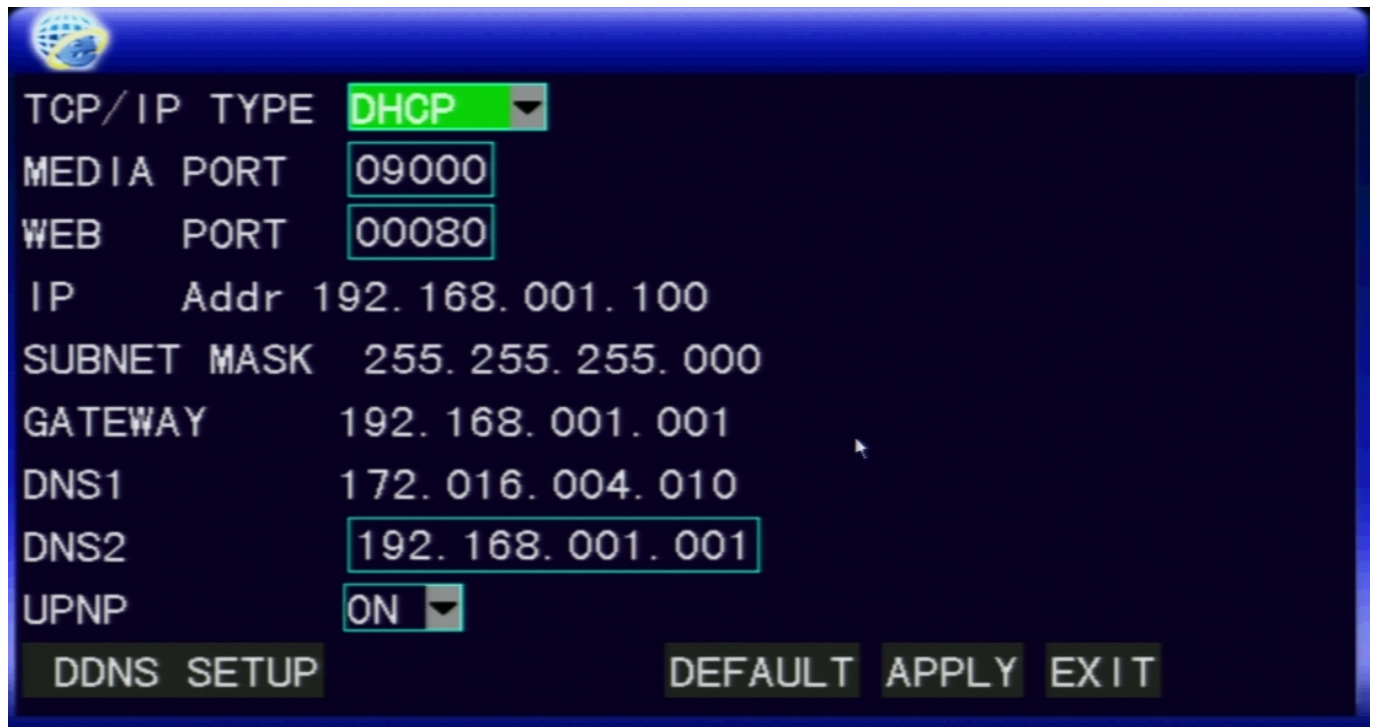

The screenshot shows a network configuration interface with a blue header and a dark blue background. At the top left is a small globe icon. The configuration fields are as follows:

Field	Value
TCP/IP TYPE	DHCP
MEDIA PORT	09000
WEB PORT	00080
IP Addr	192.168.001.100
SUBNET MASK	255.255.255.000
GATEWAY	192.168.001.001
DNS1	172.016.004.010
DNS2	192.168.001.001
UPNP	ON

At the bottom, there are four buttons: DDNS SETUP, DEFAULT, APPLY, and EXIT.

2) Once the DVR boots back up, go back in to the Network Settings and write down the IP address, Gateway (router's IP), and all port numbers. Keep this information for the Remote Network Setup.

Manuals

Checking Your Connection

3) Make sure the router is powered on.

4) Make sure the light on the router port that the ethernet cable is connected to is on.

5) Make sure the light on the DVR port is on.

6) Configure Internet Explorer on the computer that is connected to the router that the DVR is connected to using the procedures on this link: [HERE](#)

7) Open Internet Explorer and enter the IP address of the DVR, to make sure you can see the login screen. If you can, your DVR is successfully communicating with your router.

8) After the confirming your connection, go back in to the Network Settings and change the Type back from **DHCP** to **Static**. Add 20 to the last set of digits in the IP address. Input this new IP address, Gateway (router's IP), and all port numbers. Save the settings and restart the DVR. This needs to be set to Static, otherwise, if your power goes out, your DVR may end up with a different IP address than the one that we will forward later on.

Your DVR can now be viewed over your local network.

To view your DVR from outside of your local network visit the Remote Network Setup: [HERE](#)

Unique solution ID: #1006

Author: Jamie Alksnis

Manuals

Last update: 2014-04-11 10:02